


***FXOA GATEWAY***  
***In SIP***  
***User Manual***  
***(2/4 Ports)***

|   |           |
|---|-----------|
| <b>STEPS IN CONFIGURATION</b>                                 | <b>2</b>  |
| <b>1. START UP</b>  | <b>3</b>  |
| 1.1 INTRODUCTION  | 3         |
| 1.2 FEATURES AND SPECIFICATION                                | 4         |
| 1.3 ACCESSORIES AND EQUIPMENT                                 | 6         |
| 1.4 APPEARANCE  | 7         |
| <b>2. HOW TO SETUP AND CONNECT BASICALLY</b>                  | <b>10</b> |
| 2.1 SYSTEM REQUIREMENT  | 10        |
| 2.2 IP ENVIRONMENT SETTING                                    | 11        |
| 2.2.1 <i>For Windows 2000/NT</i>                              | 11        |
| 2.3 NETWORK CONFIGURATIONS IN YOUR GATEWAY                    | 13        |
| 2.3.1 <i>Static ip address</i>                                | 15        |
| 2.3.2 <i>DHCP mode</i>  | 16        |
| 2.3.3 <i>PPPoE mode</i>                                       | 17        |
| 2.4 MAKING A VOIP CALL  | 18        |
| 2.4.1 <i>Configure the gateway into the Peer-to-Peer mode</i> | 18        |
| 2.4.2 <i>Configure the gateway into the Proxy mode</i>        | 22        |
| <b>3. ADVANCE CONFIGURATIONS</b>                              | <b>24</b> |
| 3.1 NETWORK INTERFACE   | 24        |
| 3.2 SIP INFORMATION   | 26        |
| 3.3 SECURITY CONFIG   | 28        |
| 3.4 LINE CONFIGURATION  | 29        |
| 3.5 SYSTEM CONFIGURATION                                      | 30        |
| 3.6 VOICE CONFIGURATION                                       | 31        |
| 3.7 TONE SETTING  | 33        |
| 3.8 PHONE BOOK  | 34        |
| 3.9 PREFIX CONFIGURATION                                      | 36        |
| 3.10 ROUTING TABLE  | 39        |
| 3.11 FXO PASSWORD   | 41        |
| 3.12 IP PACKET TOS  | 41        |
| 3.12 PASSWORD CONFIGURATION                                   | 43        |
| 3.13 ROM UPGRADE  | 44        |
| 3.14 FLASH CLEAN  | 48        |
| 3.15 COMMIT   | 49        |
| 3.16 REBOOT SYSTEM  | 50        |
| <b>4. COMMAND LIST</b>  | <b>51</b> |

|                            |    |
|----------------------------|----|
| 4.1 HYPER TERMINAL SETTING | 51 |
| 4.2 COMMAND LIST           | 54 |
| 4.2.1 [help]               | 54 |
| 4.2.2 [quit]               | 55 |
| 4.2.3 [debug]              | 55 |
| 4.2.4 [reboot]             | 55 |
| 4.2.5 [flash]              | 56 |
| 4.2.6 [commit]             | 56 |
| 4.2.7 [ifaddr]             | 57 |
| 4.2.8 [time]               | 58 |
| 4.2.9 [ping]               | 58 |
| 4.2.10 [sysconf]           | 59 |
| 4.2.11 [sip]               | 62 |
| 4.2.12 [security]          | 64 |
| 4.2.13 [line]              | 65 |
| 4.2.14 [route]             | 66 |
| 4.2.15 [prefix]            | 69 |
| 4.2.16 [pause]             | 70 |
| 4.2.17 [pbook]             | 70 |
| 4.2.18 [voice]             | 72 |
| 4.2.19 [tone]              | 75 |
| 4.2.20 [fxopwd]            | 76 |
| 4.2.21 [record]            | 77 |
| 4.2.22 [support]           | 84 |
| 4.2.23 [tos]               | 85 |
| 4.2.24 [pt]                | 86 |
| 4.2.25 [rom]               | 86 |
| 4.2.26 [passwd]            | 88 |
| 4.2.27 [auth]              | 89 |

## Steps in configuration

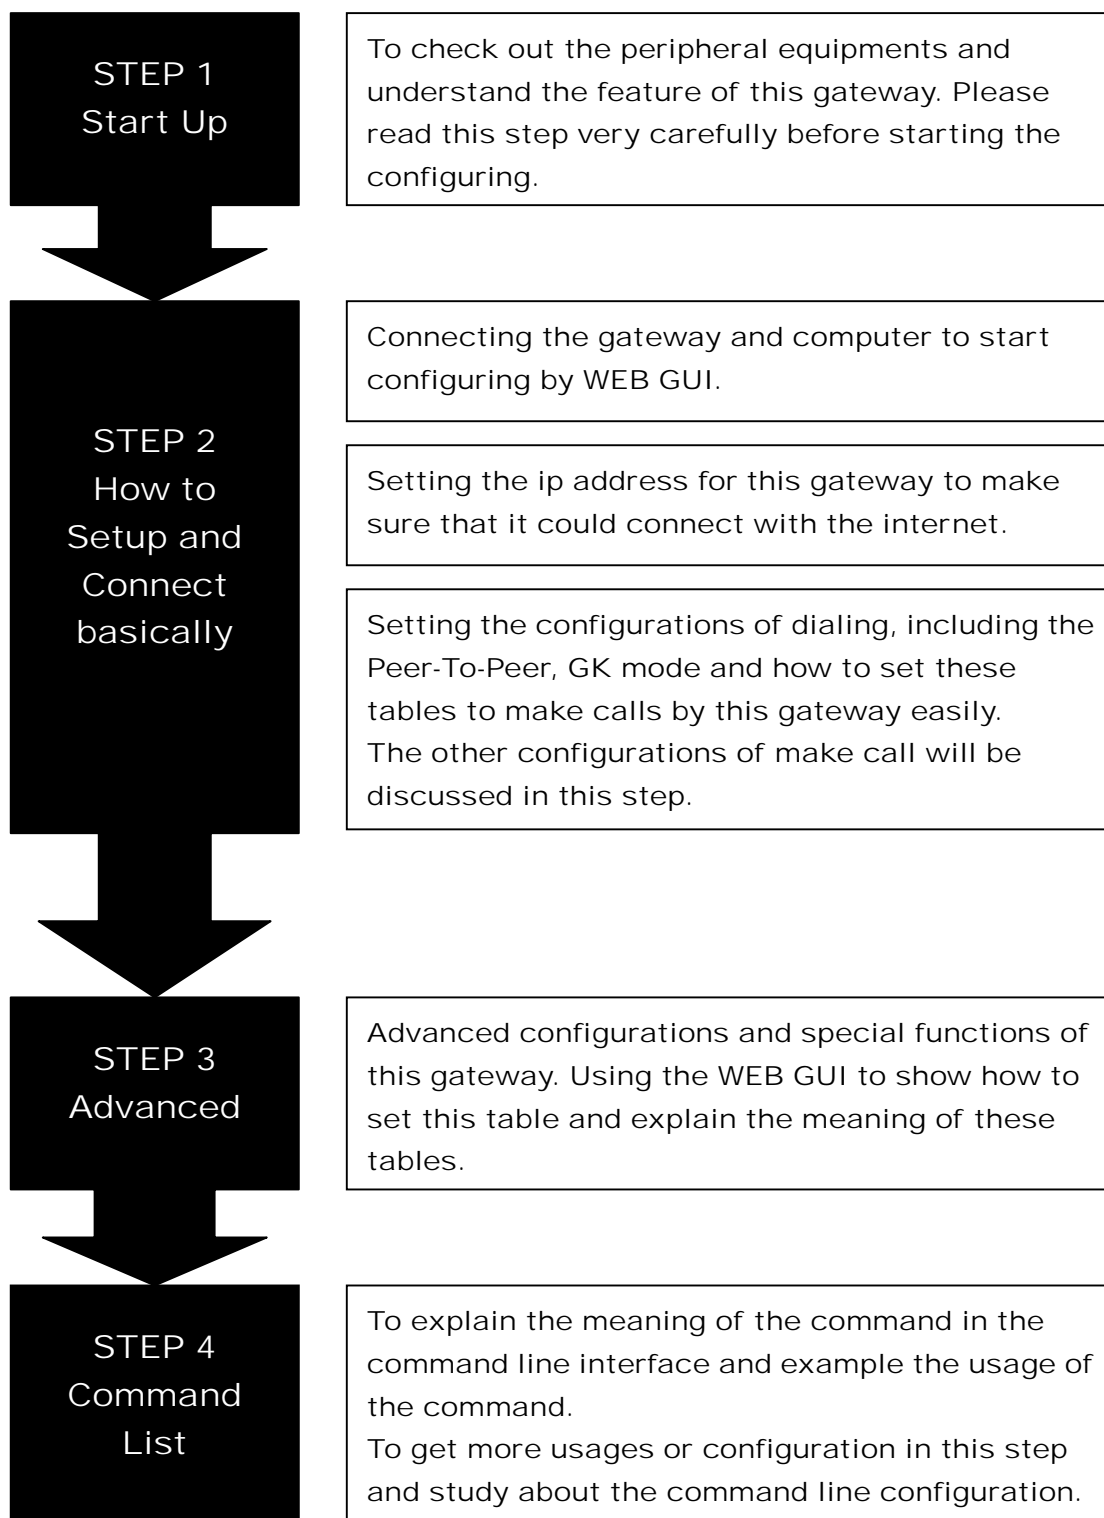


# 1. Start Up

## 1.1 Introduction

The FXO gateway provides voice/fax service over IP network with SIP protocol. By connecting to your existing ADSL or cable modem service, which allows the use of a single, network for voice and fax services with consequent saving in network infrastructure and greatly reduced telephone charges. Ideal solution for providing low cost communications between headquarters and branch offices in the world, as well as for SOHO and office telephony applications.

FXO Gateways provides analog lines to connect local PSTN/PTT interface (FXO), and converts voice/fax signal onto IP network. The management feature is via RS-232C COM port and TELNET.

### *Application Architecture*

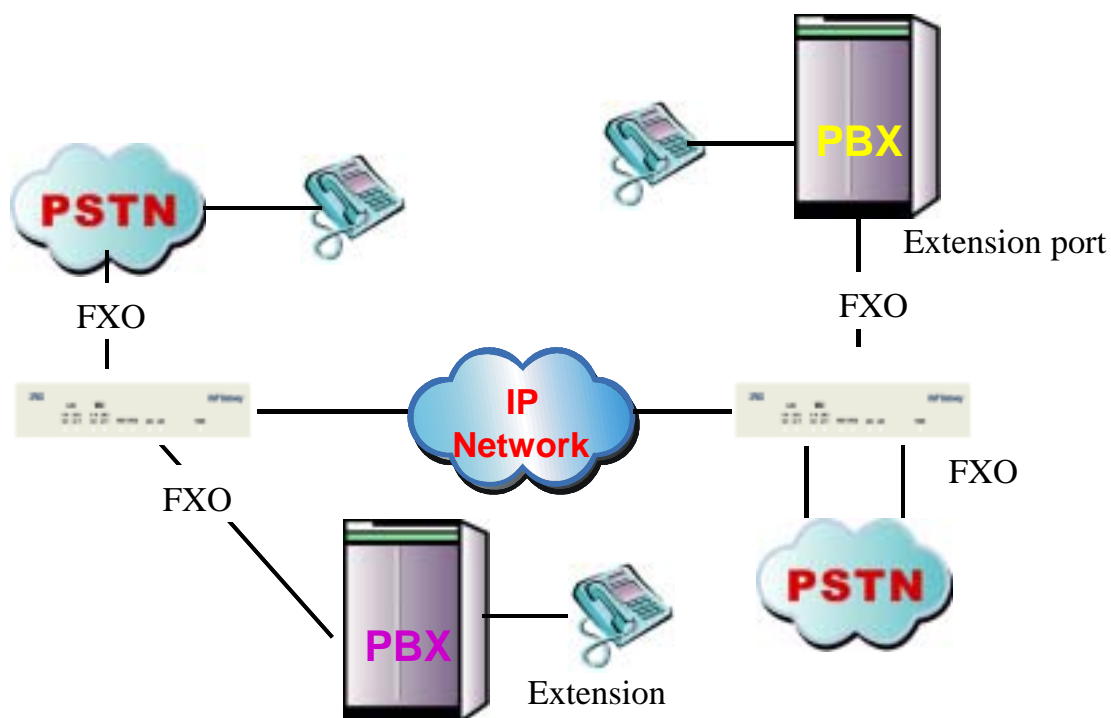

- ***FXO ports can connect with PSTN Line or Extension Line of PBX***

## 1.2 Features and specification

### Features

- IETF RFC 3261
- Automatically Dial Path Selection (IP or PSTN)
- PSTN Line switch to telephone set when power is failure
- PPPoE support
- Behind NAT router or IP sharing device
- DNS server inquiry
- Provide Peer-to-Peer Mode (Non SIP Proxy needed) selection
- E.164 Dial Plan
- TFTP/FTP software upgrade
- Remote configuration/ reset
- LED indication for system status
- Support Fix IP and DHCP

### Audio feature

- Codec -- G.711 a/  $\mu$  law, G.723.1 (6.3kbps), G.729, G.729A
- G.168/165-compliant adaptive echo cancellation
- Dynamic Jitter Buffer
- Completed voice band signaling support
- Provide In-band or RFC2833 DTMF generation/detection
- Provide call progress tone

### Management Features:

Three easy ways for system configuration

- Console port: RS-232C port
- TELNET
- HTTP Brower (e.g. Internet Explorer)

### Certification

- UL, CE, FCC

### FXO Features

- 2-wire loop start
- Support auto-attendant (Tone or voice greeting)

- PSTN polarity reversal detection
- Disconnect tone detection
- Asking ping function with the incoming calls from PSTN side
- Record and analyze the Tone from PSTN side

**Environmental**

- Operation temp:0°C to 40°C
- Humidity: 10% to 90% (Non-condensing)

## 1.3 Accessories and equipment

- ◆ The voice gateway in 2/4 FXO ports models and only one RJ-45 connector (WAN).
- ◆ The AC adapter.
- ◆ The CD of user manual.
- ◆ The connection cable in RS-232 interface.

## 1.4 Appearance

**Front panel:** The LED lights provide related system messages of the gateway.

### 2FXOA



### 4FXOA



**Power:** Light on means Gateway is power on, and vice versa.

**LINE:** Light on means the line is in use (off-hook), and vice versa.

**Status:**

1. LED light on means Gateway has successfully registered to Proxy when it is in the Proxy Mode.
2. LED flash means Gateway is not registered to the Proxy when it is in the Proxy Mode.
3. Or when Gateway is in downloading mode, LED should be flash as well.
4. LED light off means Gateway is in Peer-to-Peer Mode.

**Ready:**

1. Light on and slow flash means Gateway is in normal mode.
2. Light on and fast flash means Gateway is in downloading mode.


**WAN/LAN**

**10/100:** Network Rate to be 10 Base-T or 100 Base-T.

**Link:** Light on means the Gateway was connected with the network connector.

**Act:** LED should be light on and in flash display when data is transmitting.


**Back panel:**

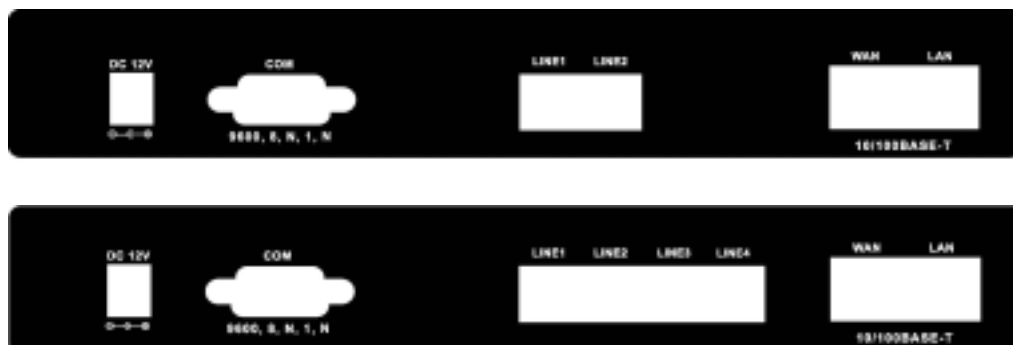

**1. Ethernet Port**

**LAN/WAN: 10/100 Base-T;** RJ-45 socket, complied with ETHERNET 10/100base-T.

The pin-out is as following:

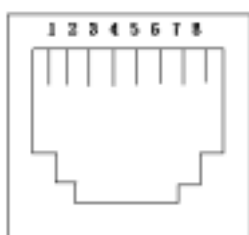

PIN 1, 2: Transmit

PIN 3, 6: Receive

**2. LINE:**

RJ-11 connector, FXO interface is for connecting the extension line of PABX or PSTN Line.




**3. COM:**

RS232 console port (DB-9pin **male** connector)

**Note:** use straightforward cable to connect to your computer.



PIN OUTS

| Pin | Name | Dir   | Description   |
|-----|------|---|---------------|
| 2   | RXD  |  | Receive Data  |
| 3   | TXD  |  | Transmit Data |
| 5   | GND  |  | System Ground |

**4. 12V DC:**

Input AC 100V~120V; output DC12V.

## **2. How to Setup and connect basically**

### **2.1 System Requirement**

1. One PC (a) Pentium 100 or above, 64 RAM, Windows 98 or above.  
(b) Ethernet card or COM port
2. One standard straightforward RS-232 cable (female connector to Gateway side).
3. PBX extension Lines or PSTN Lines.
4. Software tools (a) Hyper Terminal, TELNET, WEB Browser.

## 2.2 IP Environment Setting

User must prepare a valid IP address, complied with IP Network, for Gateway's proper operation.

For testing the validation of chosen IP address, using the same IP configuration in other PC or Notebook, and then try to connect to Public Internet (go to well-known website, receive Internet mail, or ping a specific public IP address). If it works, use the same IP address and network configuration for Gateway.

Please follow up the step for the configuration of your computer or notebook.

### 2.2.1 For Windows 2000/NT

Please make sure that the network interface of your computer is working fine and the **cross over line** (RJ-45) is connecting with the computer correctly or you could use a **hub** to connect with your computer and this gateway. Turn on your computer and configure the network parameter as follow:

**1** Go to the **start** menu and enter the **setting** area. Click **control panel**.

**2** Enter the network configuration.

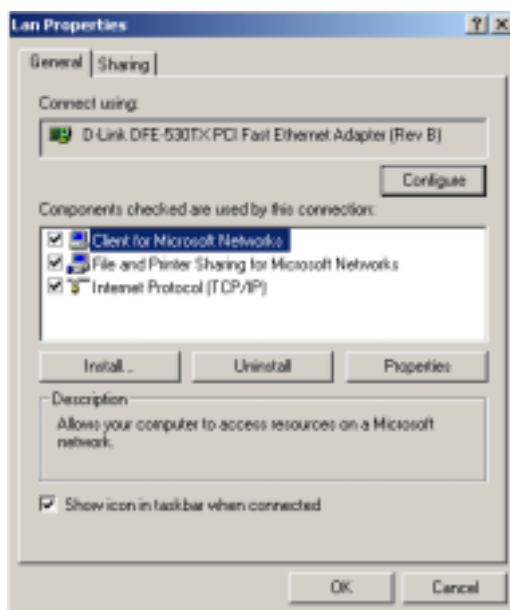


Figure 2.1: Network Configuration

**3** Select the **Property** of the LAN card.

**4** Setup the ip address, subnet mask and default gateway as below:



Figure 2.2: Configure the network

**5** Click OK after you finished the network setup.

The default ip address, netmask and default gateway address of the gateway is 10.1.1.3, 255.0.0.0, 10.1.1.254.

## 2.3 Network configurations in your gateway

1 Key in the ip address of the gateway (http://10.1.1.3) with the browser



Figure 2.3: WEB Browser

2 After key in the ip address, you have to enter the user name and password to enter the WEB configuration. (Username: root ; No password)

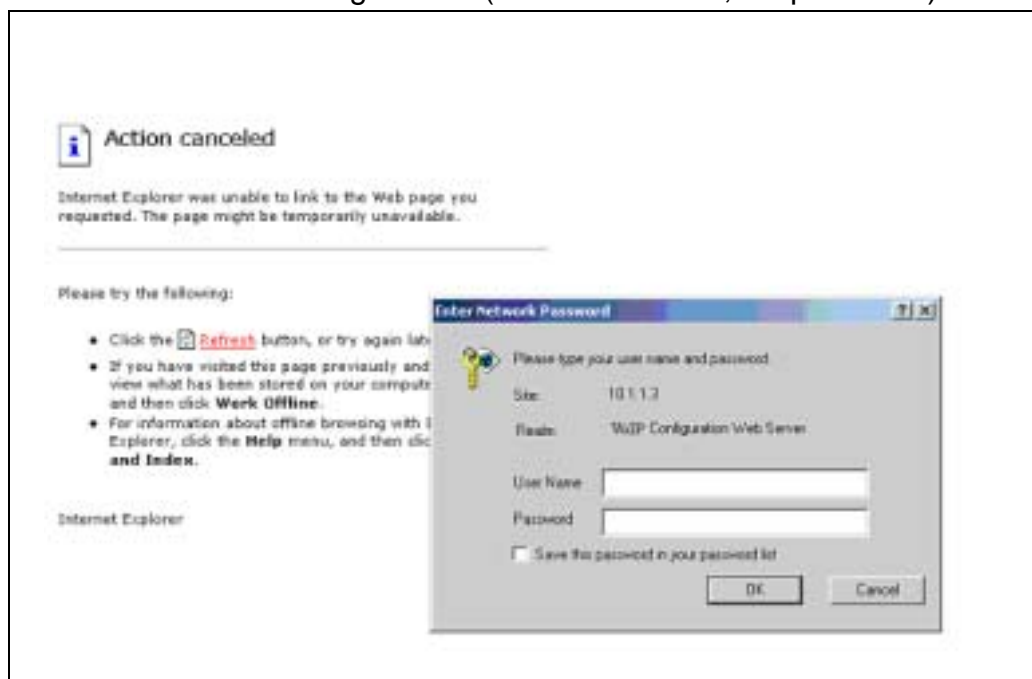


Figure 2.4: Login the username and password

3 You will enter the main page of the configuration after key in the login name and password correctly:



Figure 2.5: The main WEB configuration

4 Press the **Network Interface** to configure the networking of your gateway:

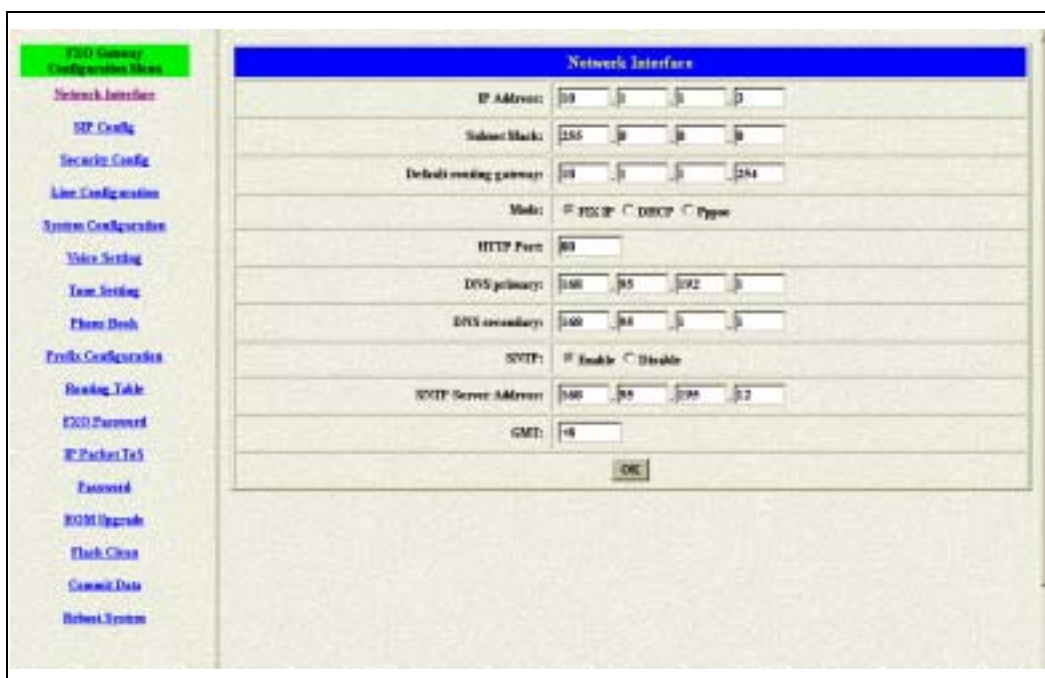


Figure 2.6: The Network Interface

### 2.3.1 Static ip address

- 1 Please get the correct ip address, netmask and default gateway address from your ISP first. Press the OK button if you finished.

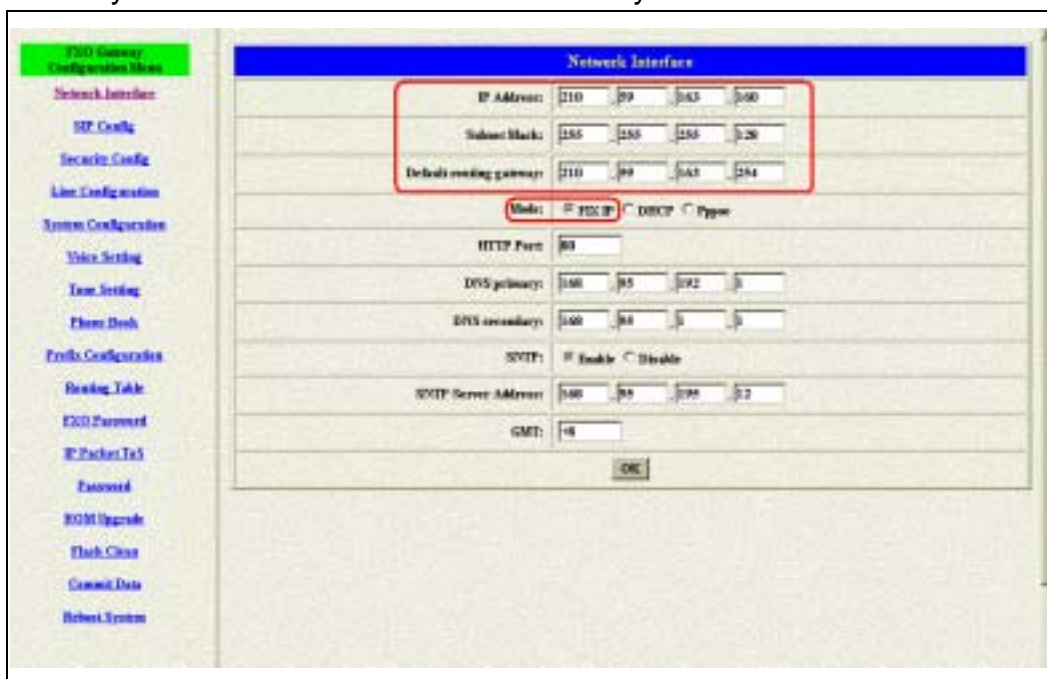


Figure 2.7: Configure the static ip address

- 2 Press the commit if you finish the configuration.

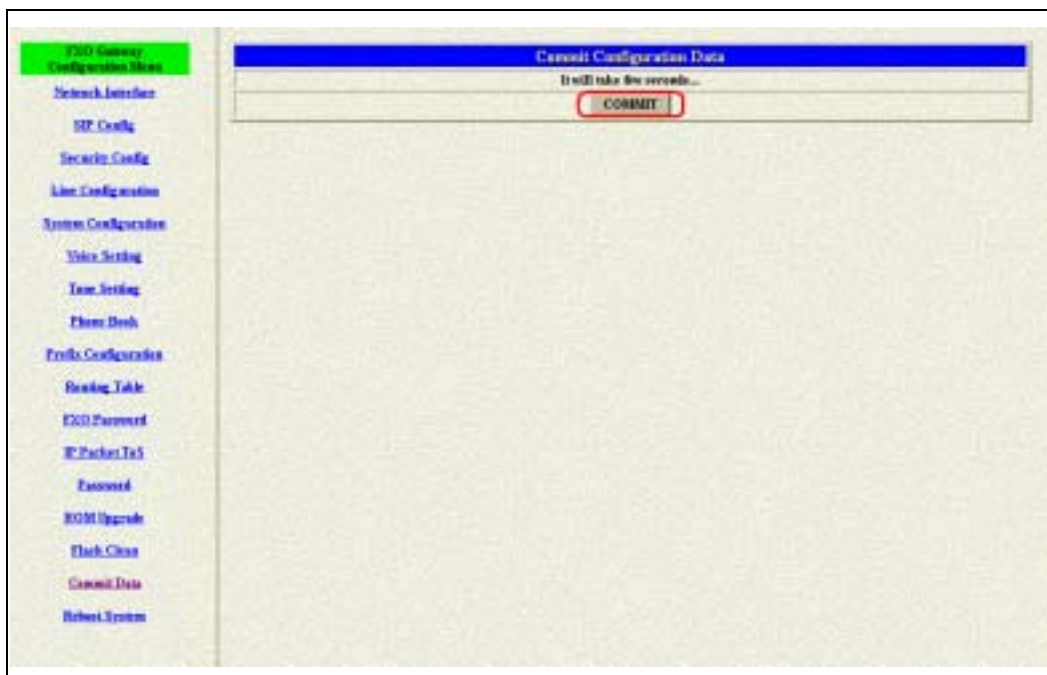


Figure 2.8: Commit the data

3 Press the reboot if you want the configuration executed.

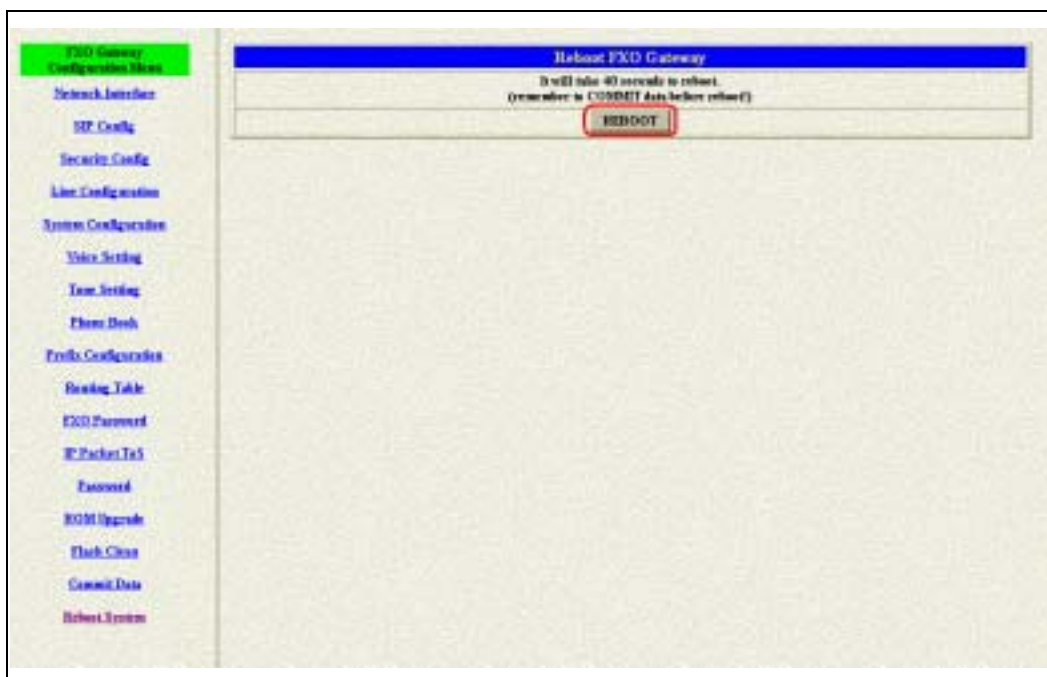


Figure 2.9: Reboot the system

### 2.3.2 DHCP mode

1 Enable the DHCP if you are using the cable modem or DHCP server.

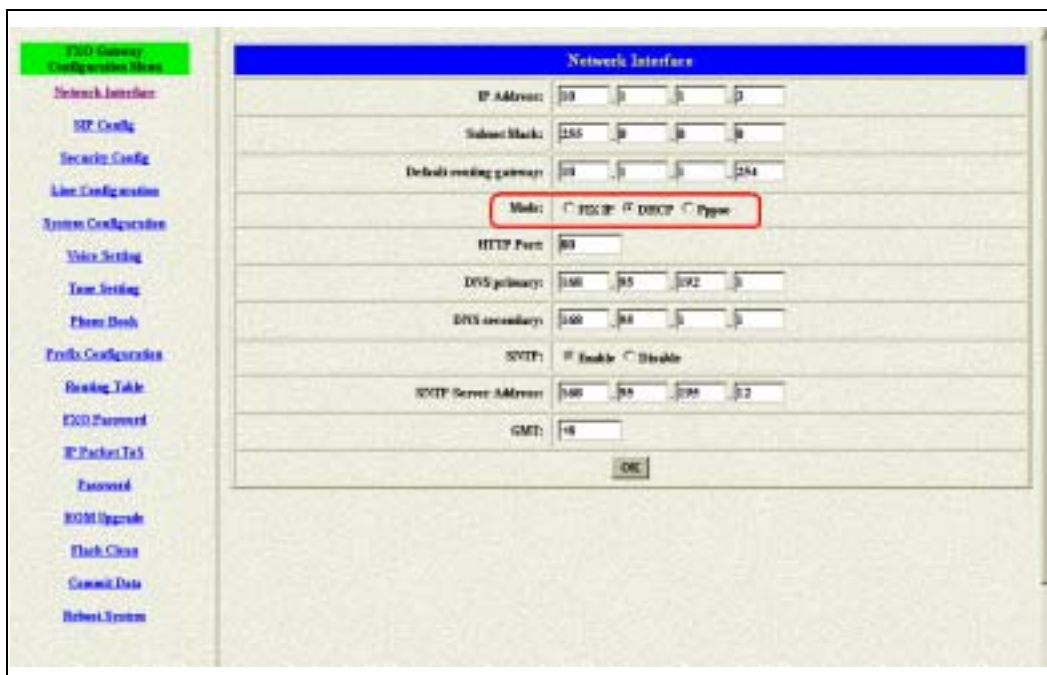


Figure 2.10: Enable the DHCP function

- 2 Please commit the data and reboot the machine after you enable the DHCP function.

### 2.3.3 PPPoE mode

- 1 Enable the PPPoE and press the info about PPPoE configuration in the correct table.

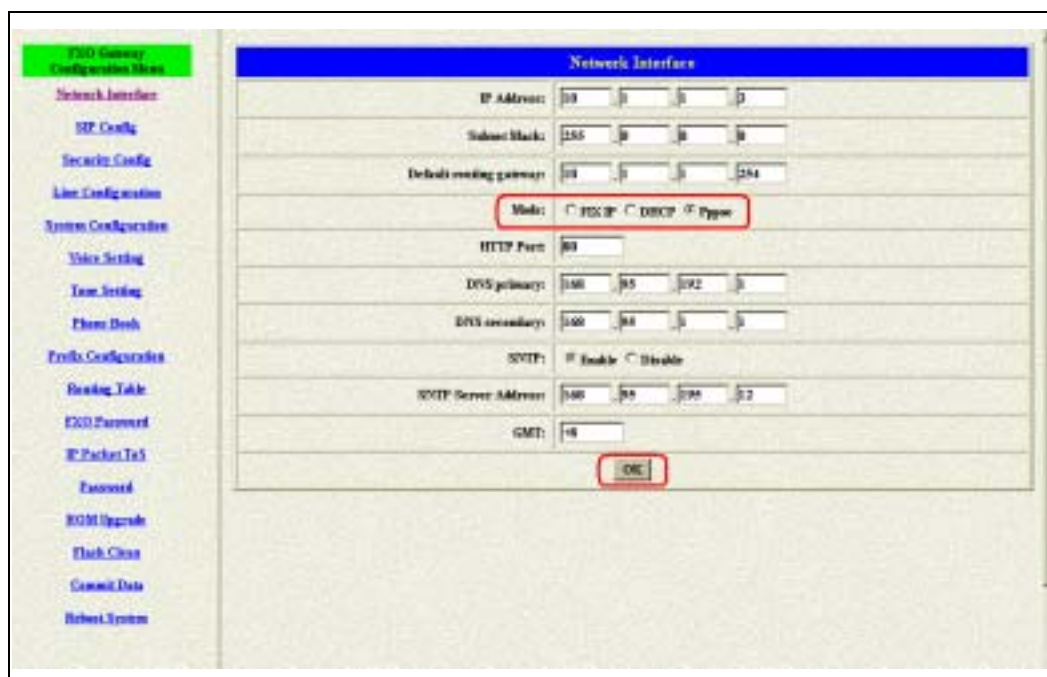


Figure 2.11: Switch to PPPoE function

- 2 Enter the Login account and password. Press the “OK” button if the configuration is finished. (see figure 2.12)

The screenshot shows the 'FXOA Gateway Configuration Menu' with a sidebar on the left containing various configuration options. The main area displays the 'PPPoE' configuration settings. The 'User Name' field is set to '12345@net.net' and the 'Password' field is masked with asterisks. The 'OK' button at the bottom of the configuration section is highlighted with a red box.

Figure 2.12: Configure the info about PPPoE

- 2 Please commit the data and reboot the machine after you finished the configuration of PPPoE.

## 2.4 Making a VoIP Call

There are two modes that you could configure the gateway for making VoIP calls. One is the Peer-to-Peer mode, another is Proxy mode. The configurations and functions are different. Please make sure about the mode you want and follow up the step to configure your gateway.

### 2.4.1 Configure the gateway into the Peer-to-Peer mode

- 1 Enter the SIP Configuration table and change the mode to Peer-to-Peer. Define the port numbers whatever you like. Press the “OK” button if the configuration is all finished. (see figure 2.13)

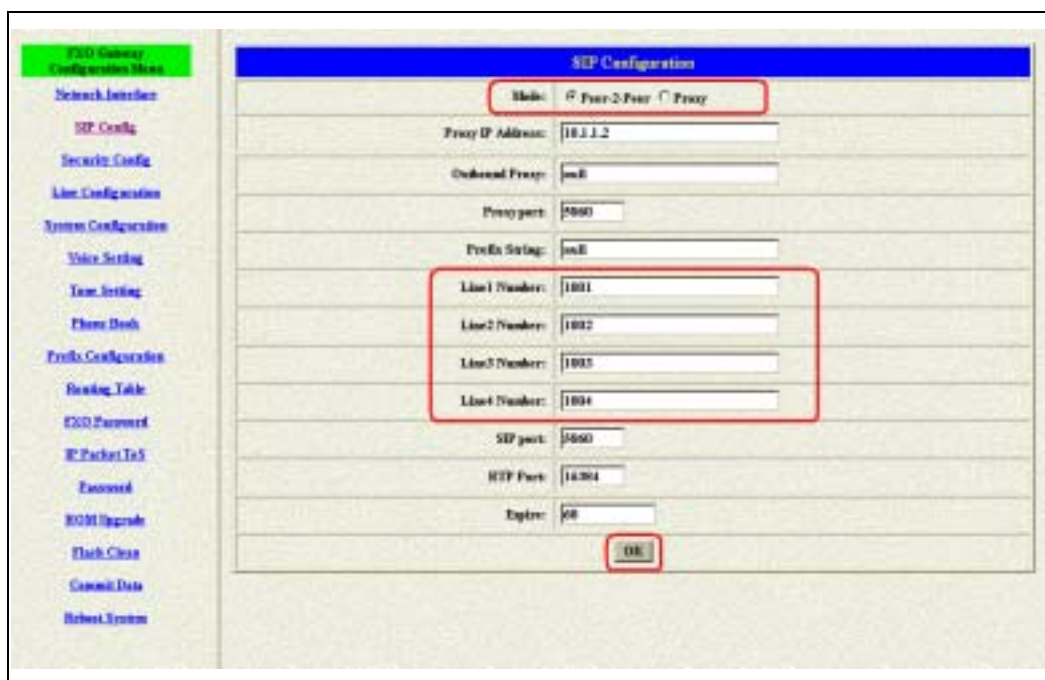


Figure 2.13: Configure the Peer-to-Peer mode

2 Enter the Phone Book configuration table and configure the name, ip address and phone number of the destination. (see figure 2.14)

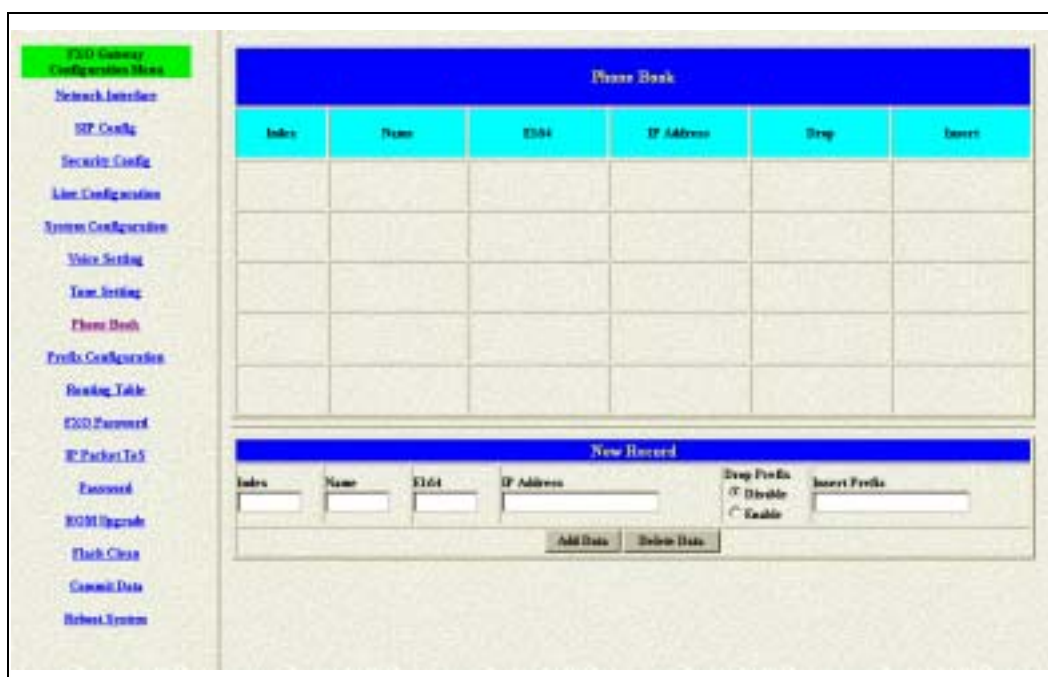


Figure 2.14: Phone Book

**【Example】**

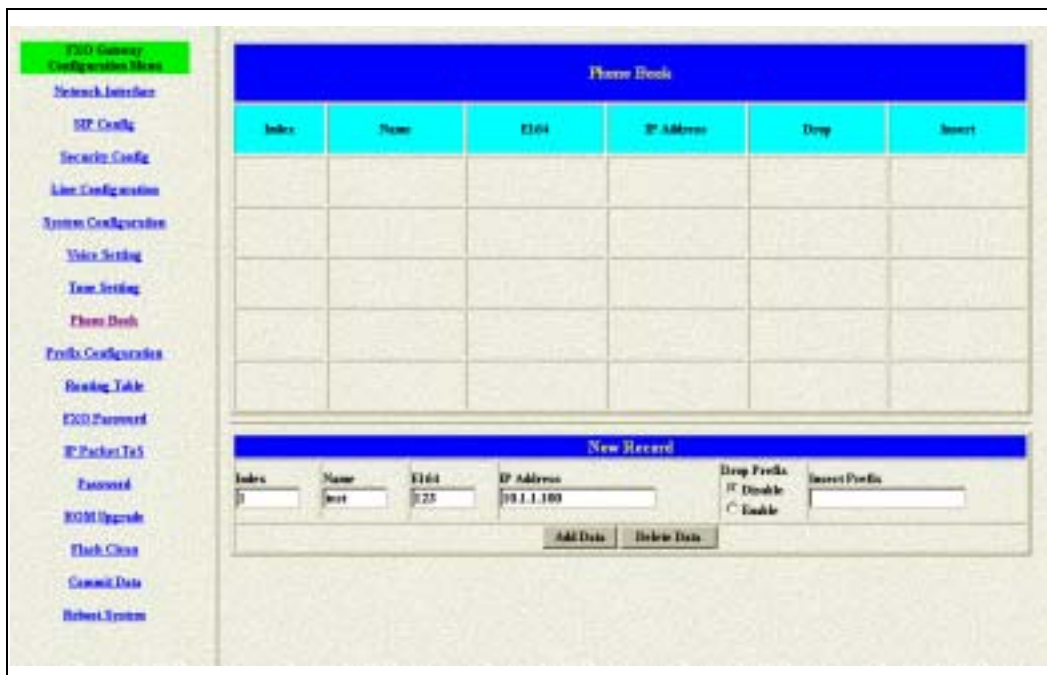


Figure 2.15: Phone Book

This is the first record of Phone Book. So the index is **1**

The name of the destination: **test**

The E164 number (phone number) of the destination: **123**

The ip address of the destination: **10.1.1.100**

- 4 Press the “Add Data” button when you finished, and the new table will display on the first index if you press the Phone Book configuration button.



Figure 2.16: To show the Phone Book record

**5** Please Commit it and Reboot the system if the configuration is finished.

**Phone Book is only for the Peer-to-Peer mode and could support forty records.**

**【The application in the drop and insert function】**

| Input (E164) | Drop    | Insert | Output |
|--------------|---------|--------|--------|
| 100          | Disable | X      | 100    |
| 200          | Disable | 0      | 0200   |
| 300          | Enable  | X      | X      |
| 400          | Enable  | 500    | 500    |

X – Do not enter any numbers

**Please make sure about that the FXO port was connected with the PSTN line or the extension line of the PABX before you start to make a voip call.**

## 2.4.2 Configure the gateway into the Proxy mode

- 1 Enter the SIP Configuration table and change the mode from Peer-to-Peer to Proxy mode. To change the Proxy information from your service provider (Ex: The Proxy IP, Outbound Proxy IP and Registered number).

| SIP Configuration                 |   |
|-----------------------------------|---|
| Mode:                             | <input type="radio"/> Peer-to-Peer <input checked="" type="radio"/> Proxy |
| Proxy IP Address:                 | 87.238.2.200  |
| Outbound Proxy:                   | null  |
| Proxy port:                       | 5060  |
| Prefix String:                    | null  |
| Line1 Number:                     | 1001  |
| Line2 Number:                     | 1002  |
| Line3 Number:                     | 1003  |
| Line4 Number:                     | 1004  |
| SIP port:                         | 5060  |
| HTTP Port:                        | 8080  |
| Expires:                          | 60  |
| <input type="button" value="OK"/> |   |

Figure 2.17: Configure the Proxy info

- 2 Press the OK button that is on the bottom of this page to save the configuration.
- 3 Switch to the Security Config page and put the user account and password in the correct table. Please get this info from your ITSP. Press the OK button if the configuration is finished. (see figure 2.18)

| Security Configuration |                                   |
|------------------------|-----------------------------------|
| Line1 Account:         | <input type="text" value="1001"/> |
| Line1 Password:        | <input type="text" value="123"/>  |
| Line2 Account:         | <input type="text" value="1002"/> |
| Line2 Password:        | <input type="text" value="456"/>  |
| Line3 Account:         | <input type="text" value="1003"/> |
| Line3 Password:        | <input type="text" value="789"/>  |
| Line4 Account:         | <input type="text" value="1004"/> |
| Line4 Password:        | <input type="text" value="123"/>  |

OK

Figure 2.18: Configure the Security info

- 4 Press the Commit Data and Reboot System buttons when you finished the configuration.

## 3. Advance Configurations

There are too many advanced commands for the advanced users. The following chapters are based on the application layer. Please get the info what you need. If you need the command, please watching the chapter of Command Line Interface.

### 3.1 Network Interface

Users have to configure the Network configurations in this page. This gateway will be work while it is connecting with the internet network. Please get more info from the following descriptions. (see figure 3.1)

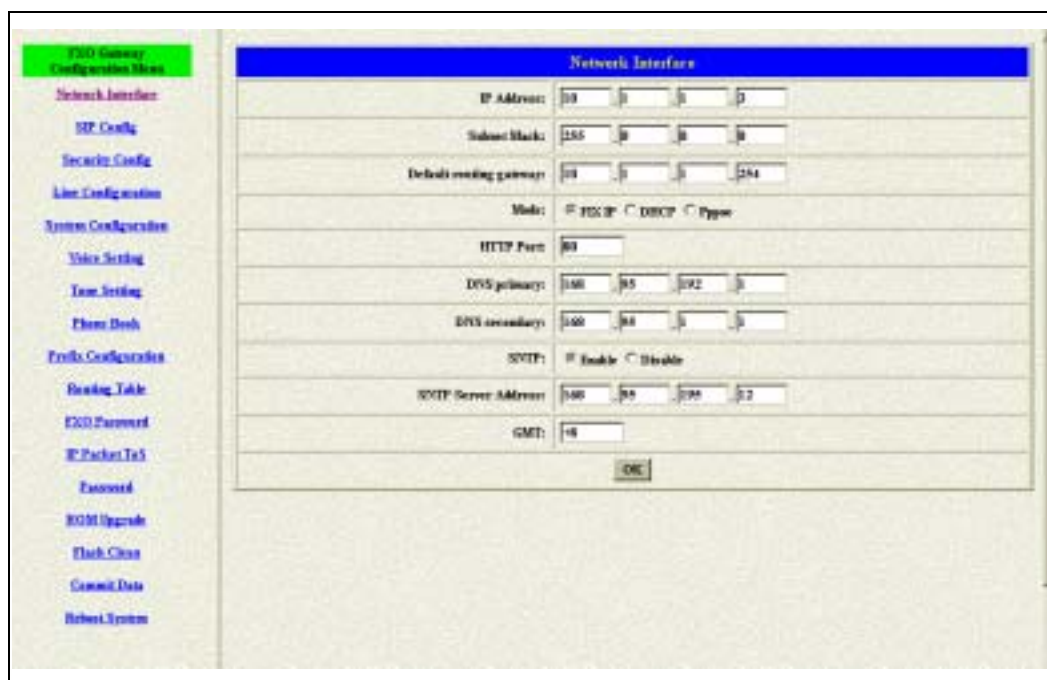


Figure 3.1: Network Interface

- ◆ IP Address – Define the ip address for your networking if it is the fixed ip. Please get this info from your ISP.
- ◆ Subnet Mask – Define the mask address for your networking. Please get this info from your ISP.
- ◆ Default Routing Gateway – Define the default gateway for your networking. Please get this info from your ISP.
- ◆ IP Mode – To configure the fixed or dynamic ip address for this unit.

Please configure to PPPoE if the ADSL is using the PPPoE type.

- ◆ HTTP Port – To configure the HTTP port for access this unit from the remote side.
- ◆ DNS primary – To configure the first ip address for the DNS server.
- ◆ DNS secondary – To configure the second ip address for the DNS server.
- ◆ SNTP – Enable the SNTP server registering function if user wants to get the correct time from the Command Line Interface.
- ◆ SNTP Server Address – Enter the correct ip address of the SNTP server or get the incorrect time from the Command Line Interface.
- ◆ GMT – Configuring the time area for the time display in the Command Line Interface.
- ◆ PPPoE User Name – To configure the user name for the PPPoE connection.
- ◆ PPPoE Password – To configure the password for the PPPoE connection.
- ◆ PPPoE IP Address – In the PPPoE mode, this table will show the ip address that this unit gets from the ISP.
- ◆ PPPoE Destination – In the PPPoE mode, this table will show the default gateway address that this unit gets from the ISP.
- ◆ PPPoE DNS primary – In the PPPoE mode, this table will show the DNS ip address that this unit gets from the ISP.
- ◆ After Remote Host Disconnection – This unit will reboot and re-connect to the ISP

## 3.2 SIP Information

This WEB page will help user to configure the information about the dial mode, GK information and some TCP/IP port for the communication. Please get more info about this configuration from the below detail descriptions. (see figure 3.5)

| SIP Configuration           |  |
|-----------------------------|--|
| Mode:                       | <input type="radio"/> Peer-2-Peer <input checked="" type="radio"/> Proxy |
| Primary Proxy IP Address:   | 18.2.2.2   |
| Primary Proxy port:         | 5060   |
| Secondary Proxy IP Address: | null   |
| Secondary Proxy port:       | 5060   |
| Outbound Proxy:             | null   |
| Outbound Proxy port:        | 5060   |
| Prefix String:              | null   |
| Line1 Number:               | 1001   |
| Line2 Number:               | 1002   |
| SIP port:                   | 5060   |
| RTP Port:                   | 16384  |
| Expires:                    | 60   |
| OK                          |  |

Figure 3.2: SIP Information

- ◆ Mode – Pick up the calling mode for this gateway.
  - Peer-2-Peer : It only supports the peer-to-peer mode and users have to define the phone book for this mode.
  - Proxy : Users have to register on the Proxy if users picked up this option.
- ◆ Primary Proxy IP Address – Enter the proxy ip if users pick up the proxy mode.
- ◆ Primary Proxy port – Set Proxy port for 380x to send message, default value is 5060, if there is no special request of Proxy server, please don't change this value.
- ◆ Secondary Proxy IP Address – Set secondary Proxy IP Address or URL address (Domain Name Server must be configured. Please refer to Network Interface). When 380x fail to register to primary Proxy, it will try to register to secondary Proxy, when it fails again, it will retry to register to Primary Proxy.

- ◆ Secondary Proxy port – Set the secondary proxy port for every SIP message, default value is 5060.
- ◆ Outbound Proxy – This version could support the outbound proxy, users could define the ip address or domain name in this table.
- ◆ Outbound Proxy port –Set outbound Proxy port for 380x to send message, default value is 5060, if there is no special request of Proxy server, please don't change this value.
- ◆ Prefix String – Users could define this if the registration name was a phonetic alphabet not the numbers.
- ◆ Line 1 Number – The phone number of the Tel 1.
- ◆ Line 2 Number – The phone number of the Line 1.
- ◆ Line 3 Number – The phone number of the Tel 2.
- ◆ Line 4 Number – The phone number of the Line 2.
- ◆ SIP port – Users could change the sip port of this unit for the registration.
- ◆ RTP port – Users could change the beginning RTP ports in this table.
- ◆ Expire – Users could change the expire time for the register message sending.

### 3.3 Security Config

Some proxy will include the security policy. The endpoint may need the user account and password for the registration. If these are necessary, users could put the correct account and password in the correct table. (see figure 3.3)

| Security Configuration |     |
|------------------------|-----|
| Line1 Account:         | 001 |
| Line1 Password:        | 001 |
| Line2 Account:         | 002 |
| Line2 Password:        | 002 |
| Line3 Account:         | 003 |
| Line3 Password:        | 003 |
| Line4 Account:         | 004 |
| Line4 Password:        | 004 |

Figure 3.3: Security Configuration

- ◆ Line 1 Account – The user name for the line 1 account.
- ◆ Line 1 Password – The password for the line 1 account.
- ◆ Line 2 Account – The user name for the line 2 account.
- ◆ Line 2 Password – The password for the line 2 account.
- ◆ Line 3 Account – The user name for the line 3 account.
- ◆ Line 3 Password – The password for the line 3 account.
- ◆ Line 4 Account – The user name for the line 4 account.
- ◆ Line 4 Password – The password for the line 4 account.

### 3.4 Line Configuration

The Line configuration will show the status of the registrations and the ports. It includes the hunt group, hotline, and no answer forward configuration. Press the Line configuration button to enter configuration table (see figure 3.4)

| Line ID     | Type | Hunt Group | Hot Line | Registration   | Status |
|-------------|------|------------|----------|----------------|--------|
| Line1(LINE) | FXO  | 2          | x        | Not Registered | Ready  |
| Line2(LINE) | FXO  | 2          | x        | Not Registered | Ready  |
| Line3(LINE) | FXO  | 2          | x        | Not Registered | Ready  |
| Line4(LINE) | FXO  | 2          | x        | Not Registered | Ready  |

Figure 3.4: Line Information

- ◆ Type – Just show the interface for this port.
- ◆ Hunt Group –Define the group number of this port. When the port is busy, the call could be transferred to another port in the same group. Only the same type could be configured in the same group.
- ◆ Hotline –Enable or Disable the hotline mode. The hotline mode will be enabled if you enter the hotline number. The default setting is disabled.
- ◆ Registration –To show the gateway registered on the GK or not. **Support the Proxy mode only.**
- ◆ Status –To show the port is busy or ready.

### 3.5 System Configuration

There are some parameters in the system configurations, please get more detail as following. (see figure 3.5)

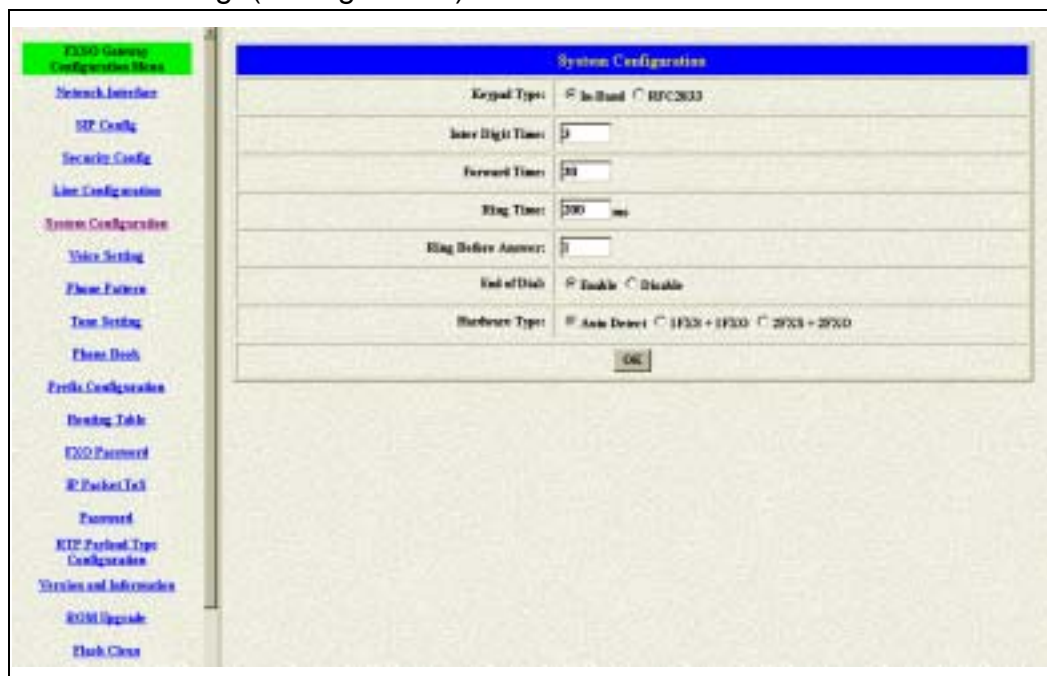


Figure 3.5: System Configuration

- ◆ Keypad type – There are two types for the Keypad. One is the In-Band type, another is the RFC2833 type. User could define the keypad type for the dialing.
- ◆ Inter Digit Time – It's the time for the time out during the dialing numbers.
- ◆ Ring Time – FXO will detect the ring tone according to this time.
- ◆ Ring Before Answer (FXO) – This will help the users to answer the calls from PSTN into this gateway quickly. The call will be connected by one time ring if users configure this for 1. (From 1 to 10)
- ◆ End of Dial – It will transfer the digit “#” if this function is disabled.
- ◆ Hardware Type – It's for the hardware issue.

## 3.6 Voice Configuration

Users could configure the voice codec or gain level in this web page.

Please get more detail info from the following description. (see figure 3.10)

| Codec Priority           | 1st   | 2nd        | 3rd        | 4th              | 5th         | 6th        | 7th         |
|--------------------------|---|------------|------------|------------------|-------------|------------|-------------|
| Codec Priority           | G.723   | G.729      | G.726      | G.726            | G.726       | G.711a     | G.711a      |
| Frame Size               | G.723 [60]  | G.729 [20] | G.726 [20] | G.711a [20]      | G.711a [20] | G.726 [20] | G.711a [20] |
| G723 Silence Suppression | <input checked="" type="checkbox"/> Enable <input type="checkbox"/> Disable |            |            |                  |             |            |             |
| Line1(LINE Volume)       | Output [28]   | Input [28] | DTMF [23]  |                  |             |            |             |
| Line2(LINE Volume)       | Output [28]   | Input [28] | DTMF [23]  |                  |             |            |             |
| Line3(LINE Volume)       | Output [28]   | Input [28] | DTMF [23]  |                  |             |            |             |
| Line4(LINE Volume)       | Output [28]   | Input [28] | DTMF [23]  |                  |             |            |             |
| Echo Cancel              | <input checked="" type="checkbox"/> Enable <input type="checkbox"/> Disable |            |            |                  |             |            |             |
| Min. Delay               | Min. Delay [60]   |            |            | Max. Delay [120] |             |            |             |

Figure 3.6: System Configuration

- ◆ Codec Priority – This could help users configure the codec priority for using. Please pay more attentions about the firmware you use. If the firmware only support G.729 series codec, the G.723 codec in this table will be useful.
- ◆ Frame Size – To configure the packet size for the codec that users want.
- ◆ G723 Silence Suppression – To enable the VAD and CNG function for the G.723 codec.
- ◆ Line1 (TEL 1) Volume – To configure the output gain (voice), input gain (input) and DTMF gain (DTMF) of the first FXS port.
- ◆ Line2 (LINE 1) Volume – To configure the output gain (voice), input gain (input) and DTMF gain (DTMF) of the first FXO port.
- ◆ Line3 (TEL 2) Volume – To configure the output gain (voice), input gain (input) and DTMF gain (DTMF) of the second FXS port.
- ◆ Line4 Volume – To configure the output gain (voice), input gain (input) and DTMF gain (DTMF) of the second FXO port.
- ◆ Line5 (LINE 2) Volume – To configure the output gain (voice), input gain

(input) and DTMF gain (DTMF) of the second FXO port.

- ◆ Line6 Volume – To configure the output gain (voice), input gain (input) and DTMF gain (DTMF) of the second FXO port.
- ◆ Echo Cancellor – To enable or disable the echo cancellation function.
- ◆ Jitter Buffer – To configure the Min or Max delay for the Jitter Buffer. The min is from 0ms and the max is 150ms.

A large jitter buffer causes increase in the delay and decreases the packet loss. A small jitter buffer decreases the delay but increases the packet loss. The size of the jitter buffer depends on the condition of the network, which varies with time. Typically the packet loss should be less than 10% for a good quality of speech.

### 3.7 Tone Setting

The Tone Setting is for the Tone detecting. The call will be dropped if the pattern of the tone from PSTN side is as same as the pattern in the disconnect tone table. The same result for the Ring Back Tone. User could define the pattern of the disconnect tone if the disconnect tone from PSTN side is not the standard tone. (see figure 3.7)

| Tone Configuration       |            |           |             |            |      |      |      |      |
|--------------------------|------------|-----------|-------------|------------|------|------|------|------|
| Disconnect Tone 1:       | High(freq) | Low(freq) | High(level) | Low(level) | On1  | Off1 | On2  | Off2 |
| Disconnect Tone 1:       | 400        | 620       | 0           | 0          | 20   | 20   | 1020 | 1020 |
| Disconnect Tone 2:       | 0          | 400       | 0           | 0          | 20   | 20   | 1020 | 1020 |
| Disconnect Tone 3:       | 400        | 620       | 0           | 0          | 50   | 50   | 1020 | 1020 |
| Disconnect Tone 4:       | 250        | 440       | 0           | 0          | 1020 | 1020 | 20   | 20   |
| Remote Ring Back Tone 1: | 440        | 480       | 13          | 13         | 100  | 200  | 1020 | 1020 |
| Remote Ring Back Tone 2: | 440        | 480       | 13          | 13         | 100  | 500  | 1020 | 1020 |
| Remote Ring Back Tone 3: | 440        | 480       | 13          | 13         | 100  | 400  | 1020 | 1020 |
| Remote Ring Back Tone 4: | 440        | 480       | 13          | 13         | 100  | 200  | 1020 | 1020 |

Figure 3.7: Tone Setting

- ◆ Disconnect Tone – Users could put the correct pattern of the disconnect tone in this table. The call will be dropped if the tone from PSTN side is match with these patterns. Users could have four tables for the disconnect tone.
- ◆ Remote Ring Back Tone – User could adjust this table to help the FXO gateway to detect the Remote Ring Back Tone. There could be four tables for the configuration.

## 3.8 Phone Book

The Phone Book configuration is only support the gateway in Peer-to-Peer mode. Please refer the chapter 2 about the Peer-to-Peer mode. (see figure 3.8)

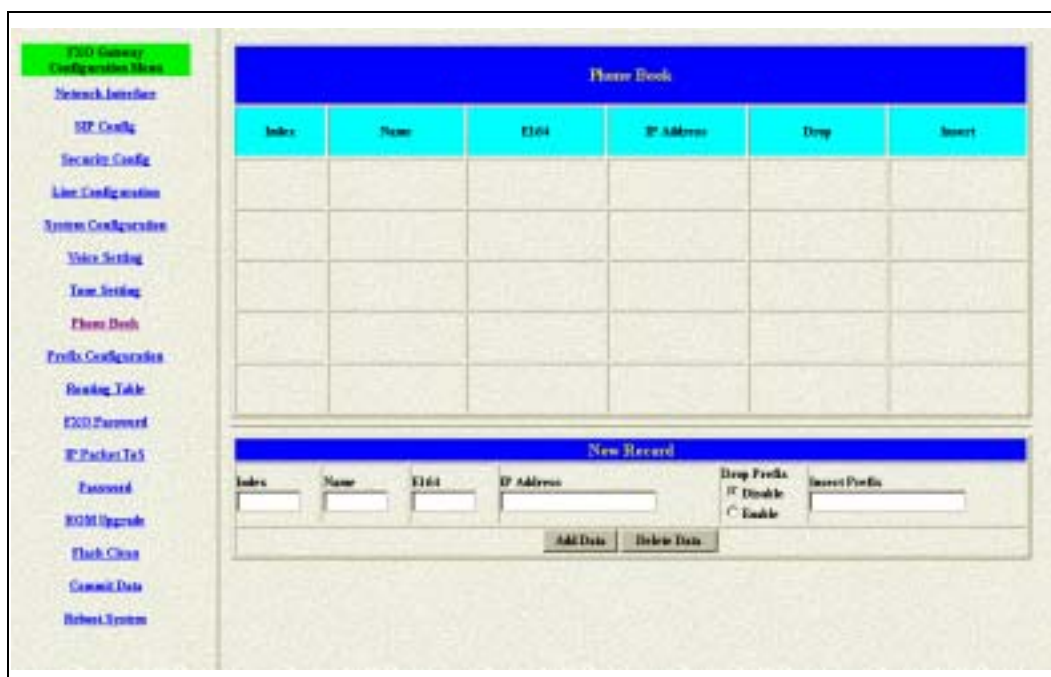


Figure 3.8: Phone Book

- ◆ Index – The list number of the Phone Book.
- ◆ Name – The name for this contact number.
- ◆ E164 – The dialing number for the calling side.
- ◆ IP Address – The destination IP address for this phone number.
- ◆ Port – The call signal port of the destination.
- ◆ Drop – Support the drop function. Enable is for enable this drop function; Disable is for disable this drop function. The Drop Prefix will drop the E164 number, which you had configured in the E164 table.
- ◆ Insert – Support the insert digits function.

1. It will be the drop function if user enable the Drop Prefix function and put nothing into the Insert Prefix table.
2. It will be the insert function if user disable the Drop Prefix function and put the digits into the Insert Prefix table.
3. It will be the replace function if user enable the Drop Prefix function and put the digits into the Insert Prefix table.

- ◆ Add Data – Press this button if users fill the entire information table above.
- ◆ Delete Date – If users want to delete the record from the table, enter the index number first and press this button. The record will be deleted.

## 3.9 Prefix Configuration

The Prefix function is using the drop and inserts function (see figure 3.9).

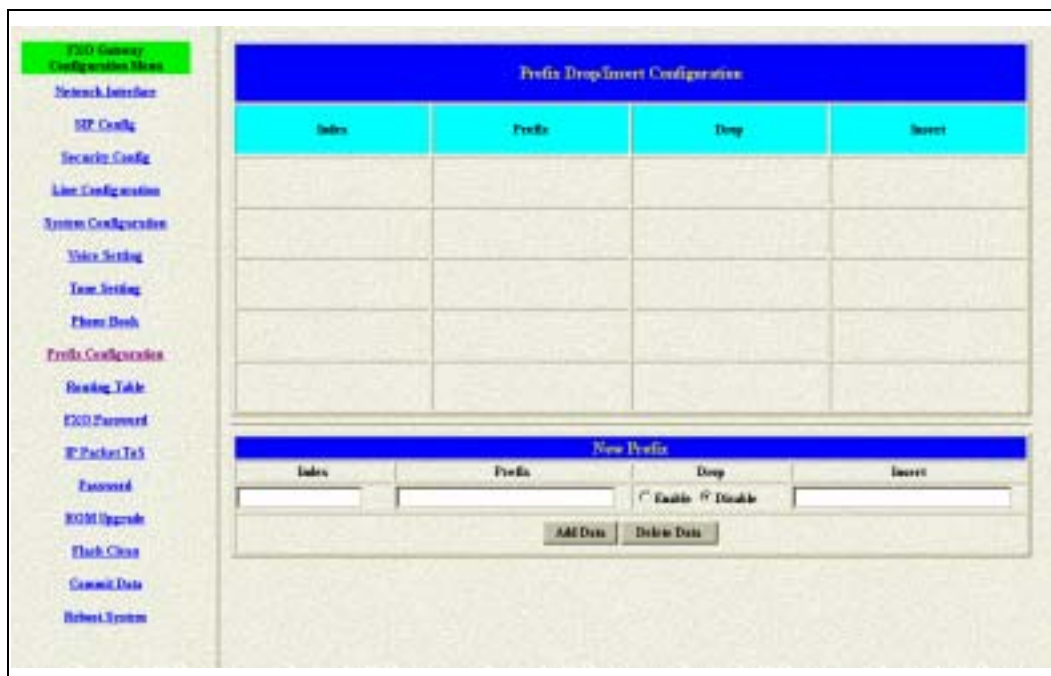


Figure 3.9: Prefix configuration

- ◆ Index – The list number of the Phone Book.
- ◆ Prefix – The prefix number of the whole numbers that could be into this gateway
- ◆ Drop – The drop function. Enable this function by the Enable button; Disable this function by the Disable button.
- ◆ Insert – The insert function. Users could enter the digits that you want to insert in this number.
- ◆ Add Data – Press this button if users fill the entire information table above.
- ◆ Delete Date – If users want to delete the record from the table, enter the index number first and press this button. The record will be deleted.

This function is just like the Phone Book configuration. But it will make the drop and insert function in the GK routed mode. All the numbers into this gateway will check out the prefix table first and find out the destination in the Routing Table.

There is an example about the configuration, please follow up these steps.

1. Press the Prefix Configuration button to enter the configuration table (see figure 3.9)
2. Enter the index number. Put the prefix numbers you will dial in the prefix table, enable (disable) the drop function and enter the numbers you want to insert (see figure 3.10)

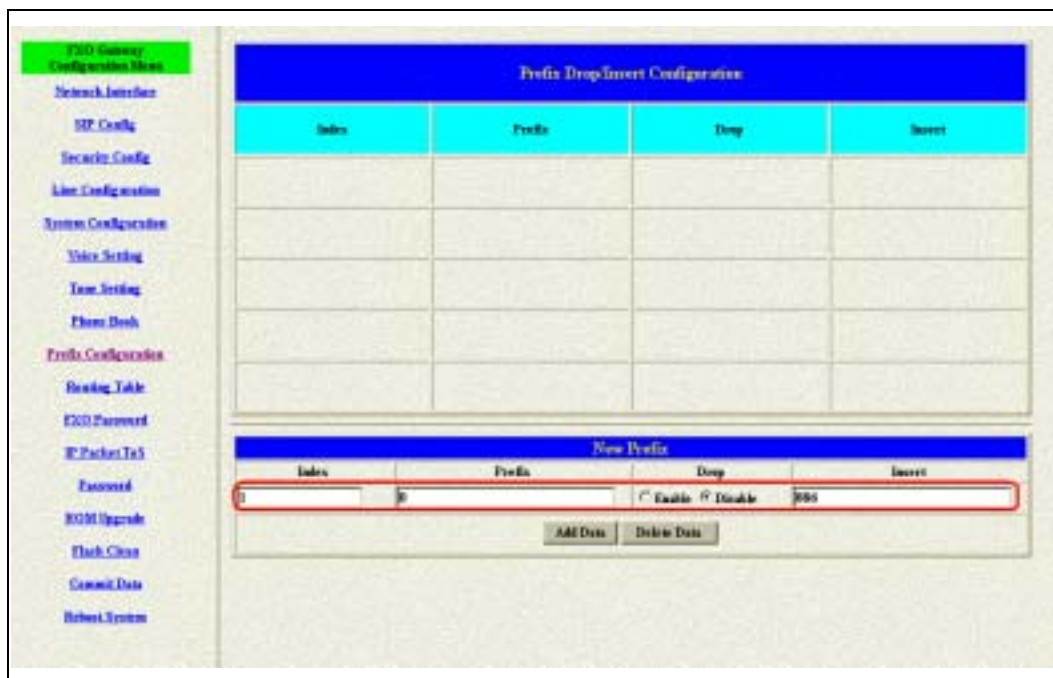


Figure 3.10: Configure the Prefix Table

The usage is as same as the drop, insert function of the Phone Book.

| Input (Prefix) | Drop    | Insert | Output |
|----------------|---------|--------|--------|
| 100            | Disable | X      | 100    |
| 200            | Disable | 0      | 0200   |
| 300            | Enable  | X      | X      |
| 400            | Enable  | 500    | 500    |

3. Press the Prefix Configuration button to reload the configuration table (see figure 3.11)

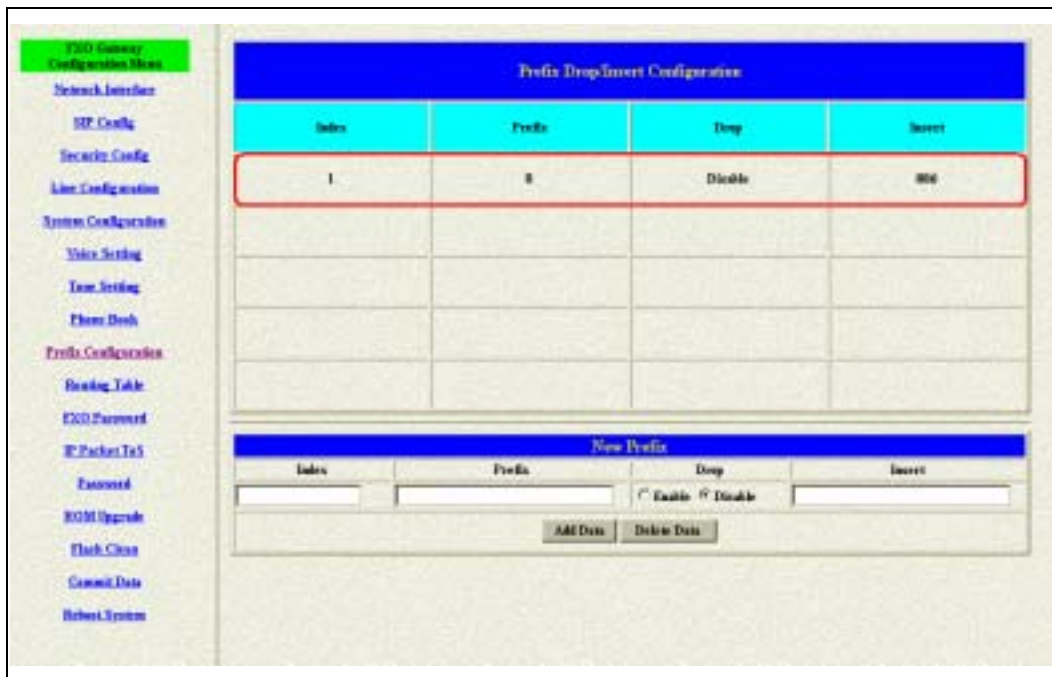


Figure 3.11: Show the added table

4. Please Commit it and Reboot the system if the configuration is finished.

### 3.10 Routing Table

Routing Table is a rule to define the destination of the calls you make. You could define the rules by the number you dial or by the ports. The Routing Table button will show you the configuration table (see figure 3.11).

In fact, there are two directions of the incoming calls (from IP and FXO side). The explanation of the default routing is as below:

| The location with the incoming calls | The location with the destination | The explanation   |
|--------------------------------------|-----------------------------------|---|
| IP (Default)                         | Fxs                               | The destination will be the FXS port when the calls from the IP side <b>without any define rules.</b> |
| Fxo (Default)                        | IP                                | The destination will be the IP side when the calls from the FXO port <b>without any define rules.</b> |



Figure 3.12: Routing Table Configuration

- ◆ Index – The list number of the Route Table.
- ◆ Default – For change the default setting. Users have to pick the direction for the default setting changed.

- ◆ Prefix – The prefix number for the dialed digits. The call will be followed this route table if the prefix number was matched.
- ◆ Destination – To decide the destination for this route table.
- ◆ E.164 – The E.164 number of the destination.
- ◆ Mini Digits – The mini digits requirement for this route table.
- ◆ Max Digits – The max digits requirement for this route table.
- ◆ Hunt Method – Enable the Hunt Group function and pick up the hunt type.
  - NONE: Disable the Hunt Group function.
  - GROUP: The Hunt Group function will working for the same group. User could configure the group in the Line Configuration table.
  - ALL: The Hunt Group will working for the same type.

None – Disable this function

Group – The call will search other ports to be the destination with the **same group** if the origin destination is busy.

All – The call will search other ports to be the destination with the **same type** if the origin destination is busy.

About the Group setting, Please get more info from the Line Configuration.

- ◆ Add Data – Add a new record for the route table.
- ◆ Delete Data – Delete a record for the route table.
- ◆ Change Default – Change default route table.

### 3.11 FXO Password

You will get the IVR if you make calls from PSTN side. The IVR will ask you the password you set, and you could make other calls to IP side if the password you type is correct. Please press the FXO Password button to configure the password (see figure 3.13)

| FXO Password Configuration |          |
|----------------------------|----------|
| Index                      | Password |
|                            |          |
|                            |          |
|                            |          |
|                            |          |
|                            |          |
|                            |          |

| New Password         |                      |
|----------------------|----------------------|
| Index                | Password             |
| <input type="text"/> | <input type="text"/> |

Figure 3.13: FXO Password

- ◆ Index – The number of this table.
- ◆ Password – The password you set.

This function is only for the calls from the PSTN side. It's not ready for the IP side as so far.

The Type of Service should be worked with the network router. The router will check all the packets if it support the TOS function. There is a field in the packet for the TOS value. This WEB is for users to configure these values to make the packets with the correct values for the TOS service from the gateway. (see figure 3.14)

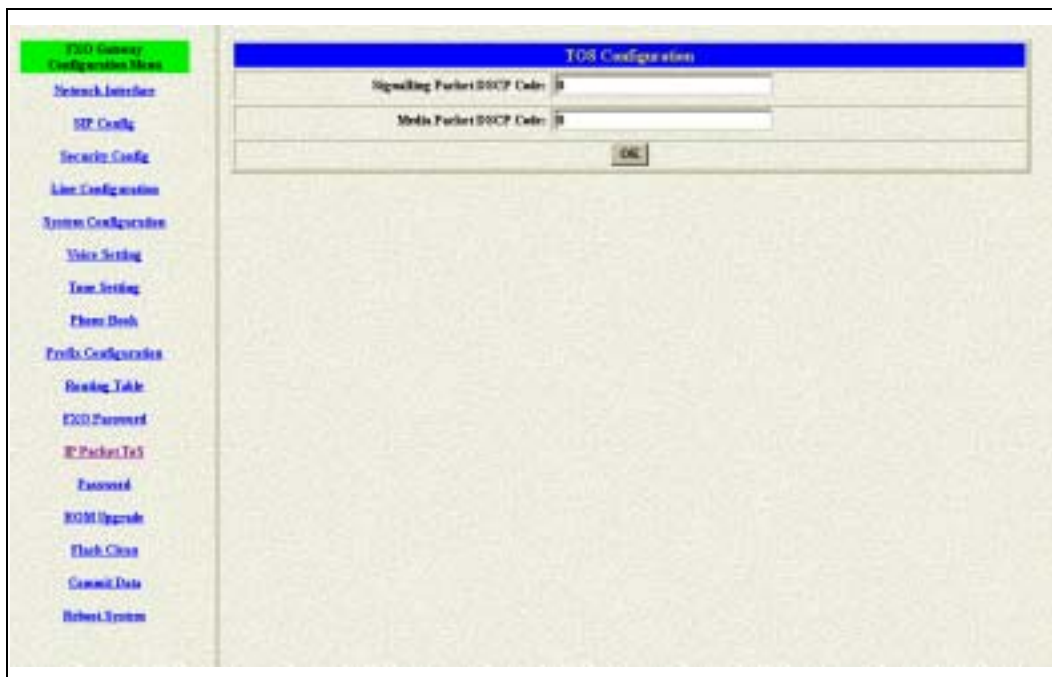


Figure 3.14: ToS

According to the RFC 1349 document, the TOS value as following:

- 1000 – minimize delay
- 0100 – maximize throughput
- 0010 – maximize reliability
- 0001 – minimize monetary cost
- 0000 – normal service

These values are the Binary format. Please change to the Decimal and put these values in to the correct table.

## 3.12 Password Configuration

There are two-login accounts in this unit. One is the account root another is administrator. The default setting for these two accounts are empty. Users could define the passwords for these two accounts. Please get more info from the following description. (see figure 3.15)

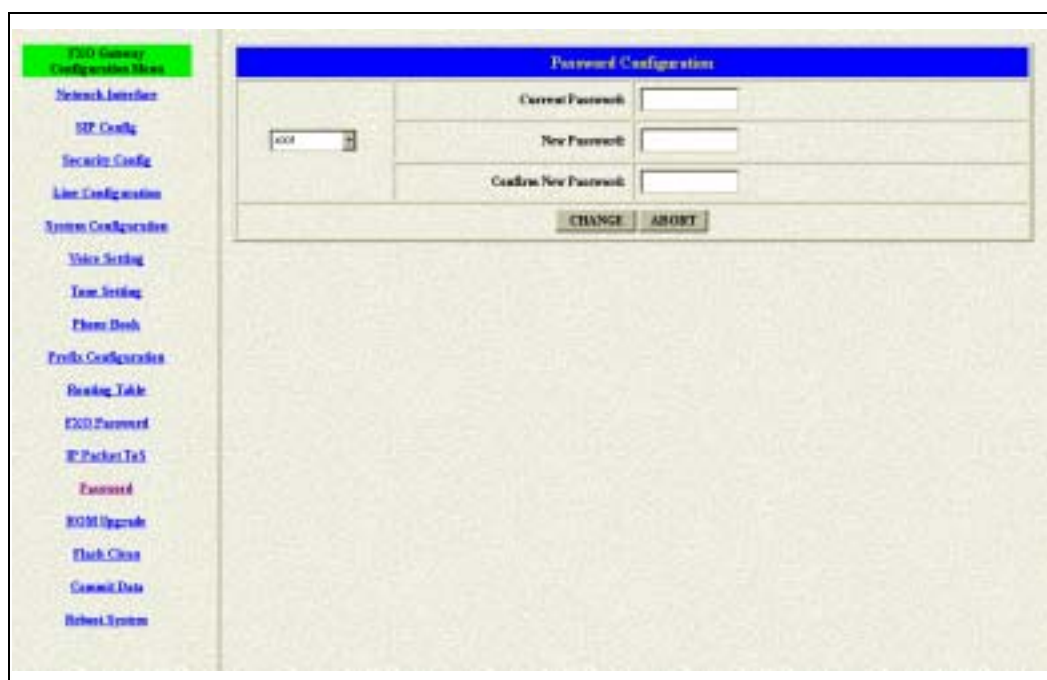


Figure 3.15 Password Configuration

- ◆ root – The password for the root account.
- ◆ administrator – The password for the administrator account. This account couldn't upgrade the 2M and boot rom file.
- ◆ Current Password – Enter the original password for the account.
- ◆ New Password – Enter the new password for the account.
- ◆ Confirm New Password – Enter the new password again.
- ◆ Change – This button will make the configurations saved and next time login will need the new password.
- ◆ Abort – Abort the configuration of the password changing.

Please remember the password you configure for the account. It will be more difficult to access it if you forgot the password.

### 3.13 ROM Upgrade

User could update the firmware just by the web configuration interface. There are two types for the upgrading procedure. One is using the TFTP server, another is using the FTP server. Please follow the step to update the gateway firmware version. (see figure 3.16)

| ROM Configuration                 |   |
|-----------------------------------|---|
| TFTP/FTP server IP Address:       | <input type="text"/>                                      |
| Target File name:                 | <input type="text"/>                                      |
| Method:                           | <input type="text" value="TFTP"/>                         |
| FTP Login:                        | name: <input type="text"/> password: <input type="text"/> |
| Target File Type:                 | <input type="text" value="Application Image"/>            |
| <input type="button" value="OK"/> |   |

Figure 3.16 ROM Upgrade

- ◆ TFTP/FTP server IP Address – Put the ip address of the TFTP or FTP server in this table.
- ◆ Target File name – Put the target file name in this table.
- ◆ Method – There are two upgrade methods for the upgrade procedure. One is TFTP and another is FTP. Please change to correct method for the upgrading.
- ◆ FTP Login – Please enter the login name and password for the FTP upgrade method. This is necessary if user change the method to the FTP.
- ◆ Target File Type – Please pick up the correct file type for upgrading. If the file name and the file type is unconformable, the upgrade procedure will be failed.
- ◆ OK – Press the OK button if all the info above are correct. The unit will start to download the firmware file from the TFTP or FTP and write to the flash after the downloading.

**【Updating the firmware by the FTP server】**

1. Pick up the “Rom Upgrade” button to enter the upgrading web page and switch to the FTP method. (see figure 3.17)

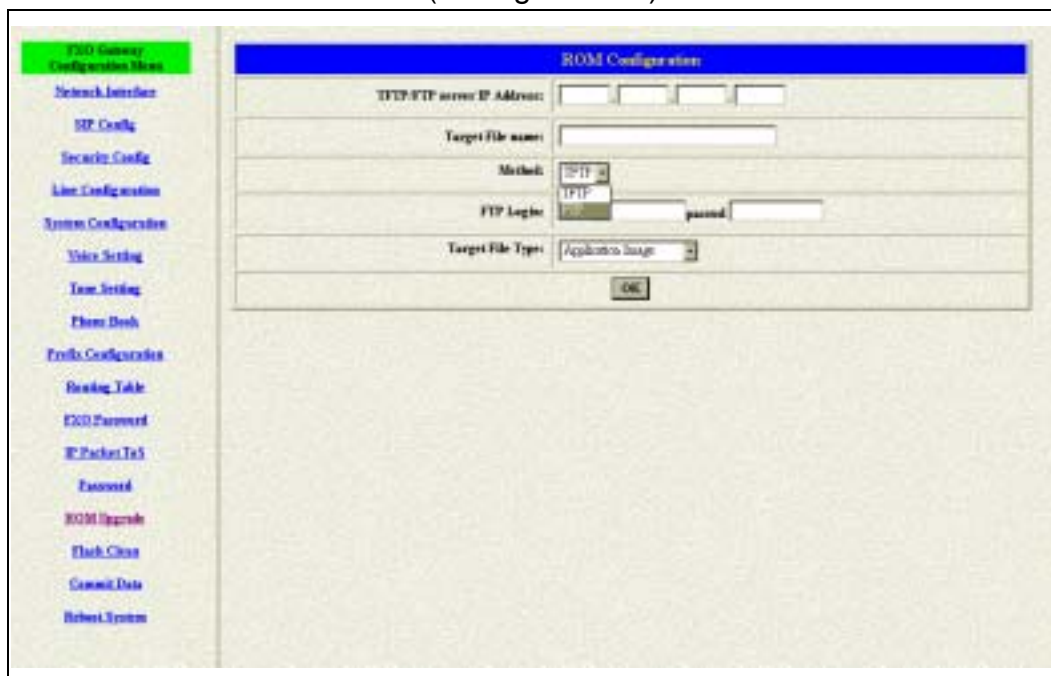


Figure 3.17 ROM Upgrade for FTP

2. Key in the IP address, the login name, password of your FTP server and the correct file name, file type. (see figure 3.18)

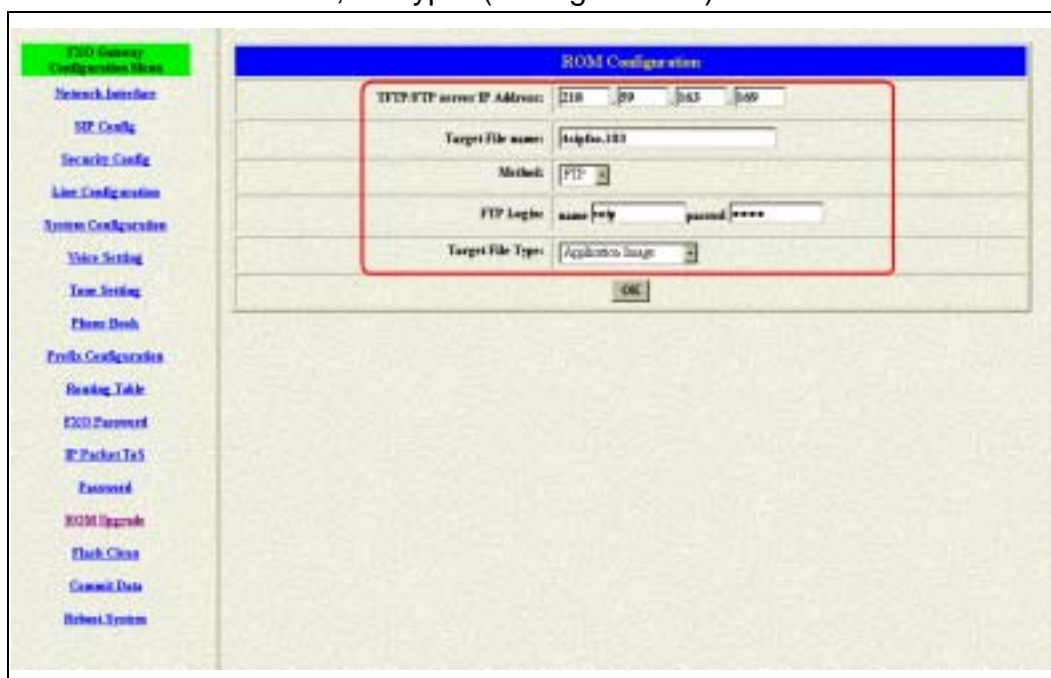


Figure 3.18: FTP information

**Please pay more attentions about the red blank. The Target File Type has to be matched with the Target File name. Please put the correct info about the Target file in this table.**



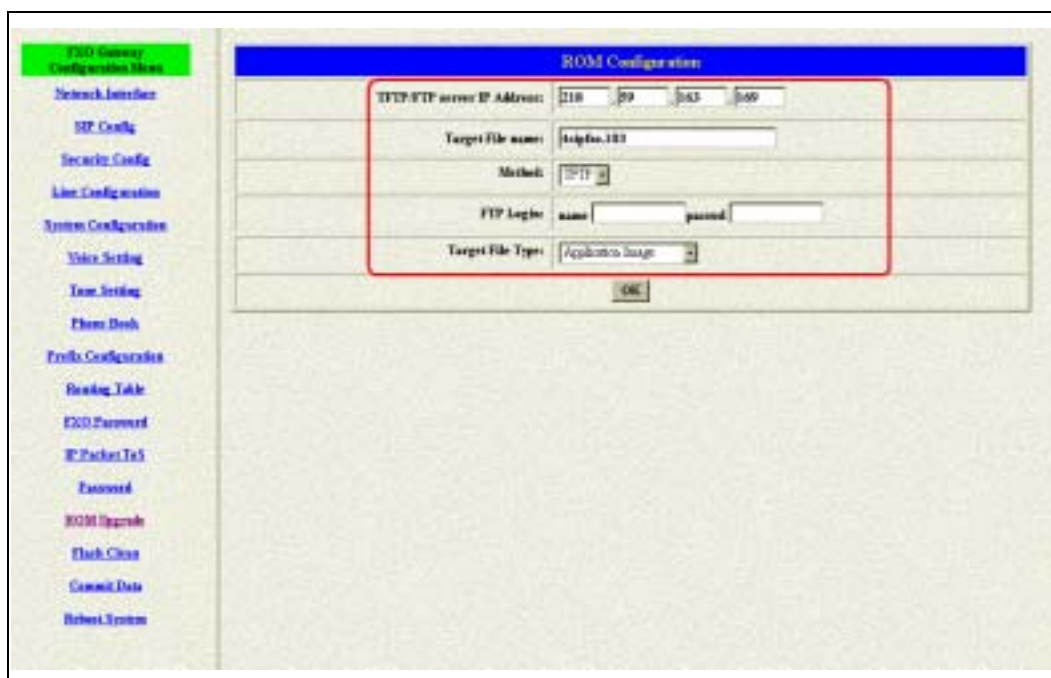


Figure 3.20: TFTP information

4. Press the OK button to start the upgrade procedure.
5. Please press the “Flash Clean” button when the procedure is finished.
6. After pressing the “Flash Clean” button, please press the “Reboot System” button to make it reboot.

### 3.14 Flash Clean

Users could make all the configurations back to the default setting by this button. The password of the account and the networking configuration couldn't be back to the default setting by this command. (see figure 3.21)

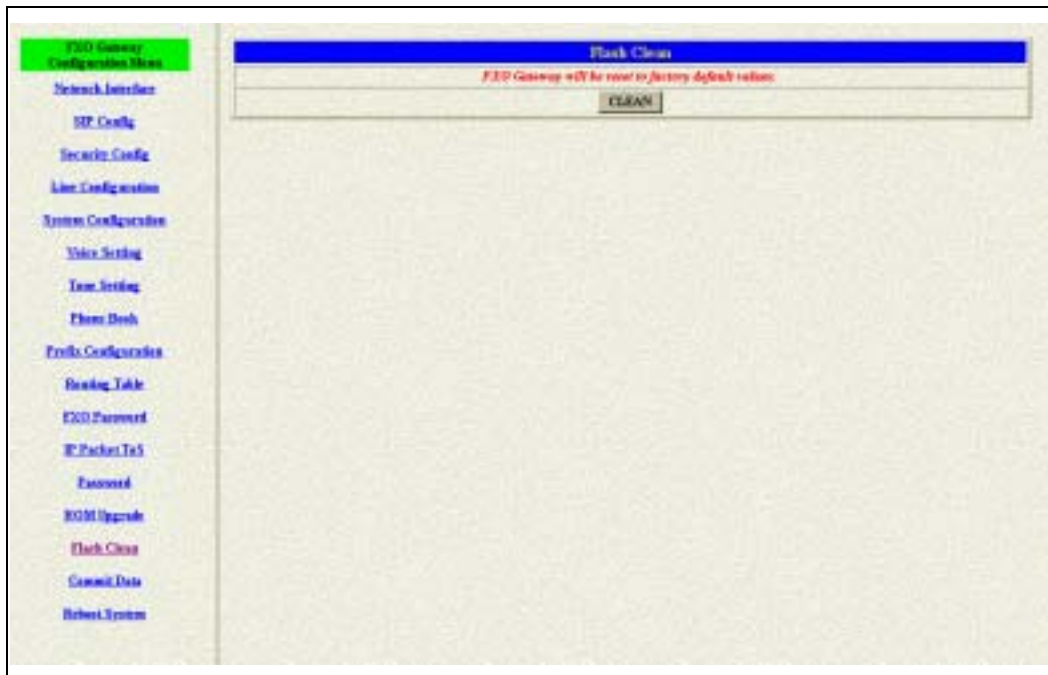


Figure 3.21: Flash Command

### 3.15 Commit

This web page could save the configurations if users change some configurations. This is necessary for users change the configurations. (see figure 3.22)

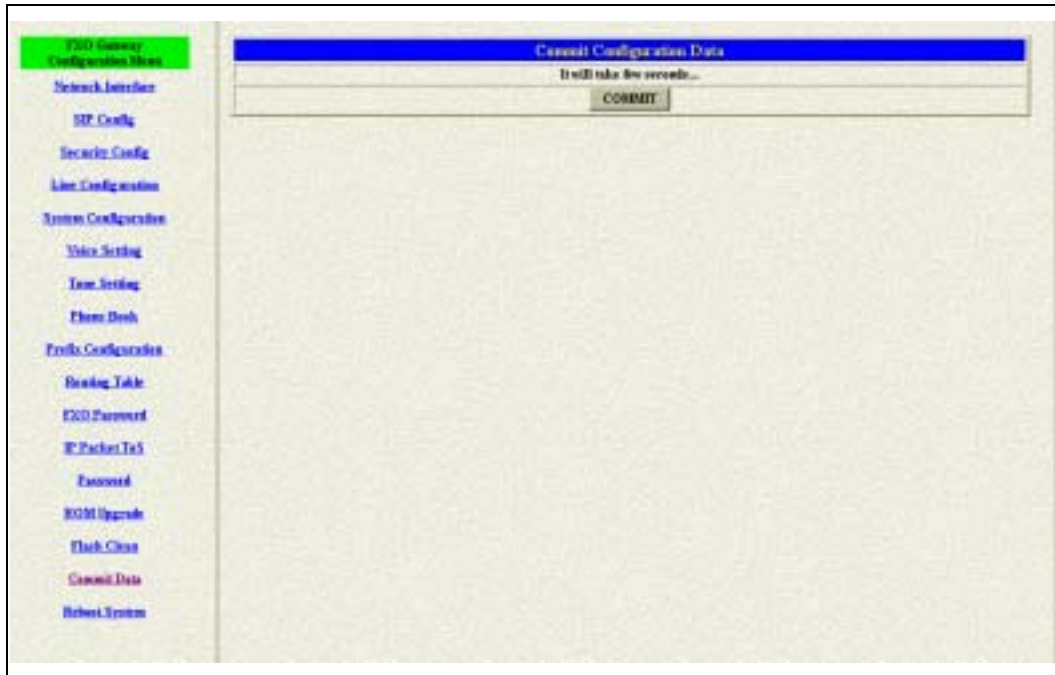


Figure 3.22: Commit the data

## 3.16 Reboot System

This web page will restart the whole system. This is the necessary step for the changing the configurations and makes it executed. (see figure 3.23)

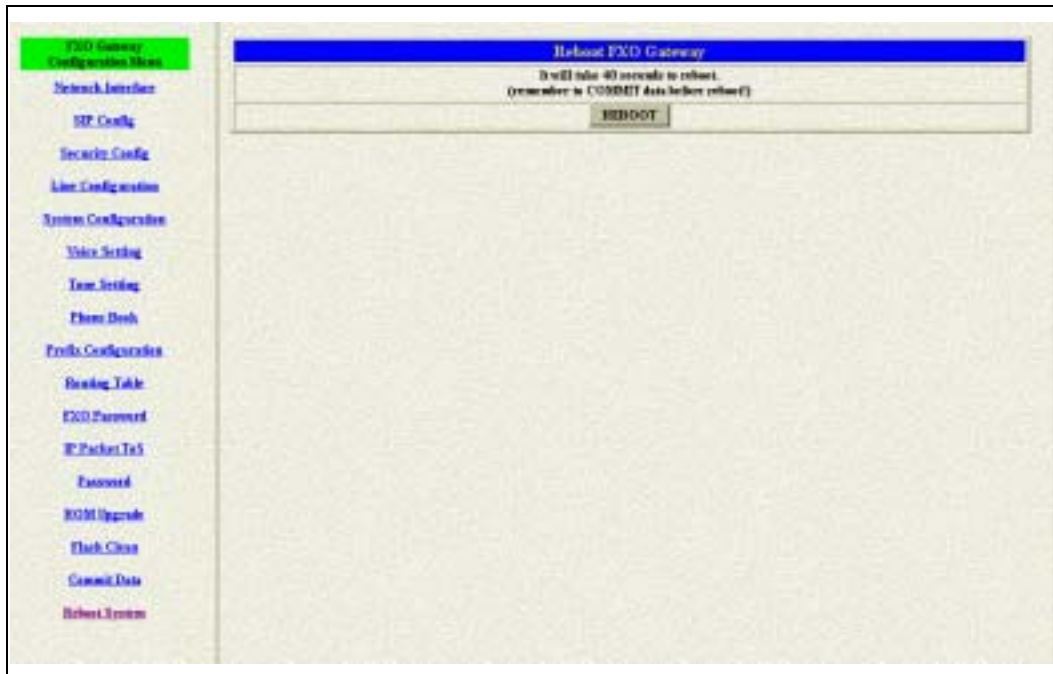


Figure 3.23: Reboot System

## 4. Command List

### 4.1 Hyper Terminal Setting

A terminal emulator is needed when using RS-232 port to configure Gateway. There are kinds of terminal emulator software. Here, we use Microsoft HyperTerminal to depict how to set up terminal emulator:

1. Execute the *Hyper Terminal* program, and then the following windows will pop-up on the screen. (START – Program files – Accessories – Communication – Hyper Terminal)

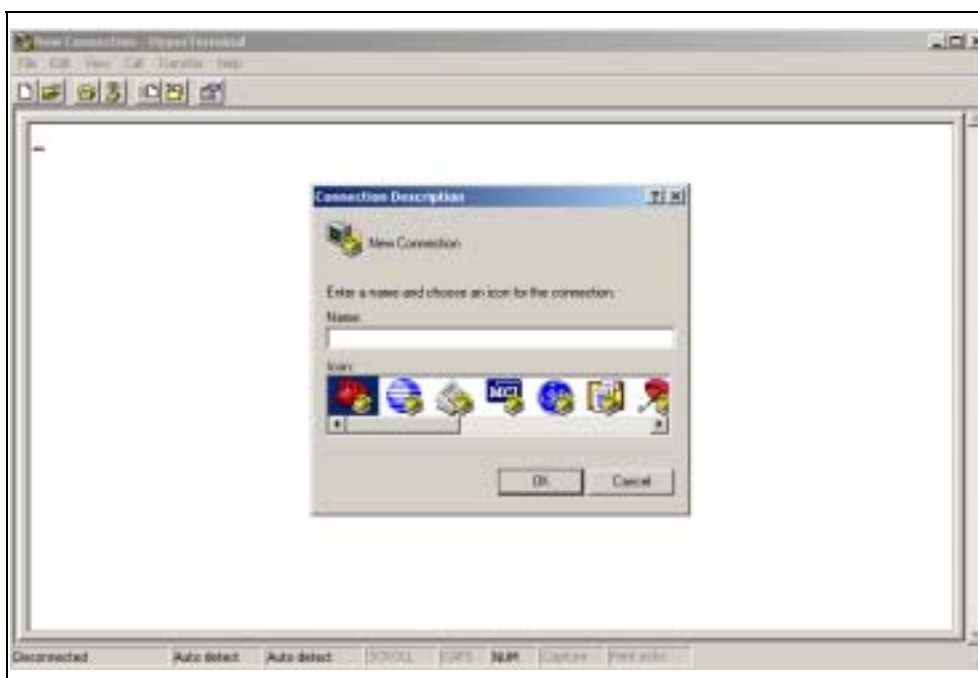


Figure 4.1: Hyper Terminal

2. Define a name such as 'voip' for this new connection.

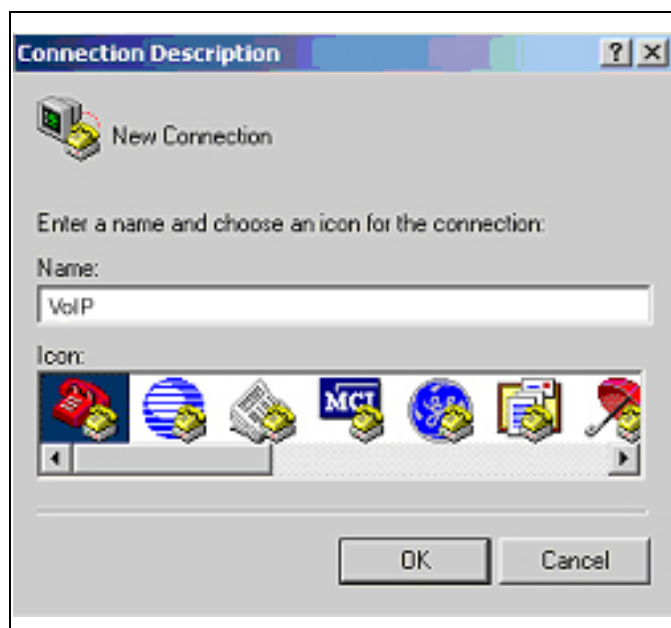


Figure 4.2: Edit the name for the connection

3. After pressing OK button, the next window appear, and then choose **COM1/2 Port**, which you are going to use.



Figure 4.3: Pick up the right interface to use

4. Configure the COM Port Properties as following:
  - ◆ Bits per second: 9600
  - ◆ Flow control: None

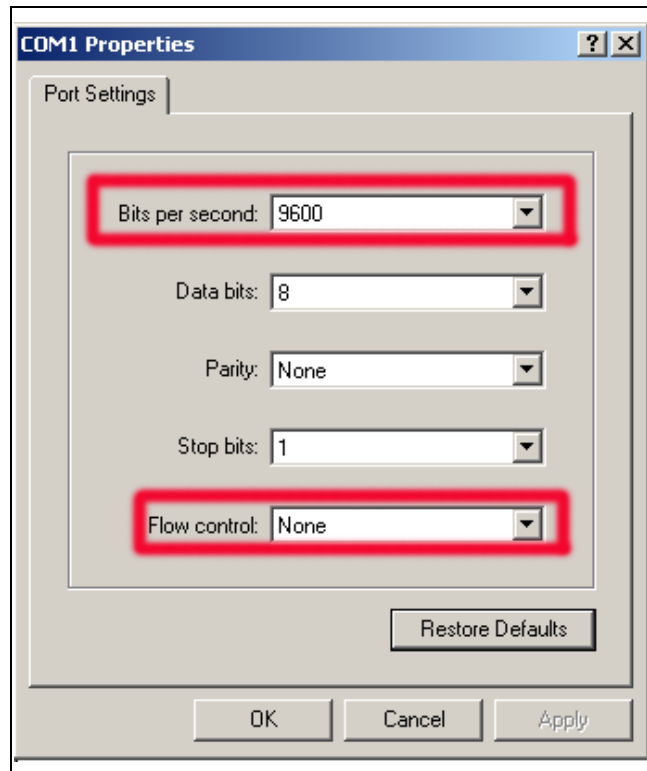


Figure 4.4: Configure the right Bps and control

5. Press 'OK' button, and then start to configure Gateway.

## 4.2 Command List

### 4.2.1 [help]

Type **help** or **man** or **?** to list all the available command.

---

*usr/config\$ ?*

|                 |   |
|-----------------|---|
| <i>help</i>     | <i>help/man/? [command]</i>                               |
| <i>quit</i>     | <i>quit/exit/close</i>                                    |
| <i>debug</i>    | <i>show debug message</i>                                 |
| <i>reboot</i>   | <i>reboot local machine</i>                               |
| <i>flash</i>    | <i>clean configuration from flash rom</i>                 |
| <i>commit</i>   | <i>commit flash rom data</i>                              |
| <i>ifaddr</i>   | <i>internet address manipulation</i>                      |
| <i>time</i>     | <i>show current time</i>                                  |
| <i>ping</i>     | <i>test that a remote host is reachable</i>               |
| <i>sysconf</i>  | <i>System information manipulation</i>                    |
| <i>sip</i>      | <i>SIP information manipulation</i>                       |
| <i>security</i> | <i>Security information manipulation</i>                  |
| <i>line</i>     | <i>Line information manipulation</i>                      |
| <i>route</i>    | <i>Routing information manipulation</i>                   |
| <i>prefix</i>   | <i>Prefix drop/insert information manipulation</i>        |
| <i>pause</i>    | <i>FXO Pause information manipulation</i>                 |
| <i>pbook</i>    | <i>Phone book information manipulation</i>                |
| <i>voice</i>    | <i>Voice information manipulation</i>                     |
| <i>tone</i>     | <i>Setup of disconnect tone and remote ring back tone</i> |
| <i>fxopwd</i>   | <i>Setup of FXO password</i>                              |
| <i>record</i>   | <i>Record voice for greeting and ask pin code</i>         |
| <i>support</i>  | <i>Special Voice function support manipulation</i>        |
| <i>tos</i>      | <i>IP Packet ToS (Type of Service)values</i>              |
| <i>pt</i>       | <i>DSP payload type configuration and information</i>     |
| <i>rom</i>      | <i>ROM file update</i>                                    |
| <i>passwd</i>   | <i>Password setting information and configuration</i>     |
| <i>auth</i>     | <i>Set configuration items for "administrator" user.</i>  |

*usage: help [command]*

*usr/config\$*

### 4.2.2 [quit]

Type **quit** will quit the configuration mode. And turn back to login prompt.

---

```
usr/config$ quit
Disconnecting...
login:
```

---

Note: *It is recommended that type the “quit” command before you leave the console. If so, the unit will ask password again when next user connects to console port.*

### 4.2.3 [debug]

Open debug message will show up specific information while FXO GateWay is in operation. After executing the debug command, it should execute command **debug -open** as well. One example is demonstrated below.

---

```
usr/config$ debug -add sip vp
usr/config$ debug -open
```

---

Parameters Usage:

|         |                                   |
|---------|-----------------------------------|
| -status | Display the enabled debug flags.  |
| -add    | Add debug flag.                   |
|         | -- sip : sip related information  |
|         | -- vp : voice related information |
| -delete | Remove specified debug flag.      |
| -open   | Start to show debug messages.     |
| -close  | Stop showing debug messages.      |

### 4.2.4 [reboot]

After **commit** command, type **reboot** to reload FXO GateWay in new configuration. The procedure is as below:

---

```
usr/config$ reboot
Attached TCP/IP interface to cpm unit 0
Attaching interface lo0...done
AC4804[0] is OK
AC4804[1] is OK
AC4804[2] is OK
```

---

*Successful*

*Initialize OSS libraries...OK!*

*open stack successful*

*cmInitialize succeed!*

*GK mode selected.*

*login:*

---

#### 4.2.5 [flash]

This command will clean the configuration stored in the flash rom and reboot FXO GateWay in factory default setting.

Parameter Usage:

-clean           clean all the user-defined value, and reboot FXO GateWay  
                  in factory default mode.

*Note: It is recommended that use “flash –clean” after application firmware  
id upgraded.*

**Warning:** Once users execute **flash –clean**, all the configurations of FXO GateWay will be cleaned. This can only be executed by user who log in with **root**

#### 4.2.6 [commit]

Save changes after configuring the FXO GateWay.

-----  
*usr/config\$ commit*

*This may take a few seconds, please wait...*

*Commit to flash memory ok!*

*usr/config\$*

---

*Note: Users should use **commit** to save modified value, or they will not  
be activated after system reboot.*

## 4.2.7 [ifaddr]

Configure and display FXO GateWay network information.

---

*usr/config\$ ifaddr*

*LAN information and configuration*

*Usage:*

*ifaddr [-print][[-mode used][[-sntp mode [server][[-cmcenter ipaddress]]]*

*ifaddr [-ip ipaddress] [-mask subnetmask] [-gate defaultgateway]*

*ifaddr [-dns index [dns server address]]*

*ifaddr [-id username][[-pwd password][[-http http port]*

|                  |  |
|------------------|--|
| <i>-print</i>    | <i>Display LAN information and configuration.</i>        |
| <i>-ip</i>       | <i>Specify ip address.</i>                               |
| <i>-mask</i>     | <i>Set Internet subnet mask.</i>                         |
| <i>-gate</i>     | <i>Specify default gateway ip address</i>                |
| <i>-mode</i>     | <i>Set ip client service(0=FIX IP, 1=DHCP, 2=Pppoe).</i> |
| <i>-sntp</i>     | <i>Set SNTP server mode and specify IP address.</i>      |
| <i>-dns</i>      | <i>specify IP address of DNS Server.</i>                 |
| <i>-timezone</i> | <i>Set local timezone.</i>                               |
| <i>-id</i>       | <i>Connection user name for pppoe.</i>                   |
| <i>-pwd</i>      | <i>Connection password for pppoe.</i>                    |
| <i>-http</i>     | <i>Http port.</i>  |

*Note:*

*SNTP mode (0=no update, 1=specify server IP, 2=broadcast mode).*

*Example:*

*ifaddr -ip 210.59.163.202 -mask 255.255.255.0 -gate  
210.59.163.254*

*ifaddr -mode 1*

*ifaddr -sntp 1 210.59.163.254*

*ifaddr -dns 1 168.95.1.1*

*usr/config\$*

---

Parameters Usage:

|               |   |
|---------------|---|
| <i>-print</i> | <i>print out current [ifaddr] settings and status</i> |
| <i>-ip</i>    | <i>assign IP address for Gateway</i>                  |
| <i>-mask</i>  | <i>assign internet subnet mask</i>                    |

- gate assign IP default gateway
- mode Switch the network type (0 = Static IP; 1 = DHCP mode 2 = PPPoE mode)
- sntp Simple Network Time Protocol (1 = ON; 0 = OFF) When SNTP function is activated, users have to specify a SNTP server as network time source. An example is demonstrated below:
- dns configure the IP address for the DNS server
- timezone set local time zone according to GMT

---

```
usr/config$ ifaddr -sntp 1 10.1.1.1
```

---

10.1.1.1 stands for SNTP server's IP address.

- id To configure the pppoe connection account for the pppoe connection.
- pwd To configure the pppoe connection password for the pppoe connection.
- http Change the http port. User can change default HTTP port (80) to another one for security or NAT application.

#### 4.2.8 [time]

When SNTP function of Gateway is enabled and SNTP server can be found as well, type **time** command to show current network time.

---

```
usr/config$ time  
Current time is THU JAN 01 05:29:23 1970
```

---

Please make sure about that the SNTP server was configured before you used this command.

#### 4.2.9 [ping]

Use **ping** to test whether a specific IP is reachable or not.

For example: if 192.168.1.2 is not existing while 192.168.1.254 exists.

Users will have the following results:

```
usr/config$ ping 192.168.1.2
no answer from 192.168.1.2
usr/config$ ping 192.168.1.254
```

```
PING 192.168.1.254: 56 data bytes
64 bytes from 192.168.1.254: icmp_seq=0. time=5. ms
64 bytes from 192.168.1.254: icmp_seq=1. time=0. ms
64 bytes from 192.168.1.254: icmp_seq=2. time=0. ms
64 bytes from 192.168.1.254: icmp_seq=3. time=0. ms
----192.168.1.254 PING Statistics----
4 packets transmitted, 4 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/1/5
usr/config$
```

---

#### 4.2.10 [sysconf]

This command displays system information and configurations.

```
-----
usr/config$ sysconf
```

System information and configuration

Usage:

```
sysconf [-idtime digit][-keypad dtmf]
        [-rba digit][-eod digit][-bl digit]
        [-localrbt digit]
        [-ring on_time off_time]
```

```
sysconf -print
```

|           |  |
|-----------|--|
| -print    | Display system overall information and configuration.  |
| -idtime   | Inter-Digits time.(1~10 sec)                           |
| -keypad   | Select DTMF type: 0=In-band,<br>1=RFC2833<br>2=INFO.   |
| -callerid | CallerId Type .(Caller type, 0: none, 1: FSK, 2: ETSI) |
| -ring     | The ring time for ring detection.(Uint:ms)             |

---

|                   |  |
|-------------------|--|
| <i>-delay</i>     | <i>The FXO dial DTMF delay.(1~9)(Unit:s)</i>                 |
| <i>-rba</i>       | <i>the number of ring times before answer.(1~5)</i>          |
| <i>-eod</i>       | <i>End of dial.(Enable:1 / Disable:0)</i>                    |
| <i>-silence</i>   | <i>Silence Detection.(0=Disable, 1=Enable)</i>               |
| <i>-connect</i>   | <i>Auto connect time.(0=Disable, for 1~65535 sec)</i>        |
| <i>-onhook</i>    | <i>Auto ON-HOOK if detect reverse.(Enable:1 / Disable:0)</i> |
| <i>-ivr</i>       | <i>General IVR in FXO.(Enable:1 / Disable:0)</i>             |
| <i>-sipping</i>   | <i>Enable the SIP-Ping function(0: OFF, 1: ON)</i>           |
| <i>-flashtime</i> | <i>Flash time setting.(1-200, 1-&gt;10ms)</i>                |

*Example: sysconf -ring 500*

*usr/config\$*

---

Parameters Usage:

|                  |  |
|------------------|--|
| <i>-print</i>    | print out all current settings   |
| <i>-idtime</i>   | set the duration(in second) of two pressed digits in dial mode as timed out. If after the duration user hasn't pressed next number, it will dial out all number pressed. (1-10 seconds)  |
| <i>-keypad</i>   | DTMF replay type. When value is "0", Gateway will transfer DTMF signal via In-Band type, "1" via RFC2833 type. "2" is SIP info method. Users can adjust the value according to various applications. <ol style="list-style-type: none"> <li><i>number (instead of Line number of FXO Line)+ PSTN number to make a call to PSTN side connected with FXO Line.</i></li> <li><i>After gateway-prefix-drop function is enabled, user must remember to re-configure line number of FXS Line, because line number of FXS Line must remove prefix number. For example, origin line number of FXS line is 1001, prefix is 100, since prefix number will be drop, once gateway has incoming call 1001, after drop gateway prefix 100, it will search line number "1". So line number must be set as "1".</i></li> </ol> |
| <i>-callerid</i> | the FXO can display the PSTN CallerID, but it must match two conditions, the PSTN CallerID must be a FSK or ETSI callerid and the FXO must under hotline mode.<br>The FXO only support FSK or ETSI callerid or PSTN, it does not support DTMF type till now, so please check it first before   |

- you test this case.
- ring ring time for ring detection(in ms). When Gateway has incoming call from PSTN side to FXO port, Gateway will determine it is a ring but not noise only if it is longer than this ring time.
- Note:**  
*In Taiwan the ring time of PSTN usually is 1000ms, so if user set ring time longer than 1000ms, FXO port may not be able to pick up the call from PSTN side*
- delay When FXO port has an incoming call from IP side and signal connection is established, it will wait the dial tone from PSTN or PBX. But sometimes the dial tone from PBX is too late so some errors will occur. Now user can use this command to change the time waiting for dial tone.
- rba When the calls from the PSTN side, FXO port will off hook if the ring time is matched with this number.
- eod It will transfer the DTMF in “#” if users disable the end of dial function. Users have to press the key pad in “#” if the end of dial function is enabled.
- silence Enable or Disable silence detect function.
- connect The unit will send the connect message- 200OK to the IP side automatically. This function just supports the one-stage dialing function.
- onhook Enable or Disable FXO reverse detect function. Welltech FXO has two ways to release FXO port, one is disconnect tone detect, another is PSTN reverse. This command can let user enable or disable FXO reverse detect function.
- ivr User can disable FXO default greeting by this command, using dial tone instead.
- sipping This function is for some special platform, such as Nortel proxy server. The FXO will send SIP Ping message to server before registering or making call.
- flashtime The FXO gateway can support [flash transparent] mode if the user in IP side press flash button. The FXO gateway will generate a flash signal to the PBX or PSTN. You can change the flash time here, default is 30 (300ms).

## 4.2.11 [sip]

Phone Book function allows users to define their own numbers, which mapping to real IP address. It is effective only in peer-to-peer mode. When adding a record to Phone Book, users do not have to reboot the machine, and the record will be effective immediately.

-----  
-----  
*usr/config\$ sip*

*SIP stack information and configuration*

*Usage:*

*sip [-mode pxmode]*

*sip [-px address] [-outpx address] [-prefix prefixstring] [-line number]  
[-expire t1]*

*sip -print*

|                   |  |
|-------------------|--|
| <i>-print</i>     | <i>Display SIP stack information and configuration.</i>  |
| <i>-mode</i>      | <i>Configure as Proxy mode or Peer-to-Peer mode.</i>   |
| <i>-px</i>        | <i>Proxy server address. (Proxy IPv4 address or Proxy dns name)</i>  |
| <i>-pxport</i>    | <i>Proxy server port. (the port of proxy)</i>  |
| <i>-outpx</i>     | <i>OutBound Proxy server address. (IPv4 address or dns name)</i>   |
| <i>-prefix</i>    | <i>Specify prefix string, use it when UserID contains alphabets (if UserID uses numerals, specify as null)</i> |
| <i>-line1</i>     | <i>Line 1 is E.164 number of L1.</i>   |
| <i>-line2</i>     | <i>Line 2 is E.164 number of L2.</i>   |
| <i>-line3</i>     | <i>Line 3 is E.164 number of L3.</i>   |
| <i>-line4</i>     | <i>Line 4 is E.164 number of L4.</i>   |
| <i>-pbsearch</i>  | <i>Search phone book 0:off/1:on.</i>   |
| <i>-lmedia</i>    | <i>Late Media 0:off/1:on.</i>  |
| <i>-cidchange</i> | <i>CID Change in From Header 0:off/1:on.</i>   |
| <i>-expire</i>    | <i>The relative time after which the message expires(0 ~ (2^31-1))</i>   |
| <i>-port</i>      | <i>SIP local UDP port number (2326~65534), Default: 5060</i>   |

*-rtsp* RTP port number (2326~65534), Default: 16384

*-busy* busy response message, Default: 486

*Example:*

*sip -px 210.59.163.171 -line1 70 -line2 71*

*usr/config\$*

---

Parameter Usages:

*-print* print current h323 related settings  
*-mode* alternatives for proxy or peer-to-peer mode (1=proxy mode; 0=peer-to-peer mode). If users select proxy mode, a valid proxy is needed when Gateway is in operation.

-----  
*usr/config\$ sip -mode 0 (peer to peer mode)*

---

*-px* to assign the ip address of the proxy when Gateway is in proxy mode.  
*-pxport* define the proxy port for the registration or call.  
*-outpx* define the out bound proxy for the endpoints.  
*-prefix* this will be prefix the alphabets before the sip line number.  
*-line1* assign FXO Line1 number.  
*-line2* assign FXO Line2 number.  
*-line3* assign FXO Line3 number.  
*-line4* assign FXO Line4 number.

**Note:**

*User can also set "x" in line number to disable the port. If the port is disabled, it can only receive calls but not calling out.*

---

**Note:**

1. For the 4 ports FXO units, it will show the line3 to line 4. For the 2 ports FXO units, it will show only line1 to line2.
2. No matter in Proxy or P2P mode, user only needs to dial line number to reach local port. For example, in P2P mode, user wants to dial from FXS TEL1 to FXO Line1, only need to dial number of line2.

---

*-pbsearch* enable/disable phone book search function under Proxy Mode. If user enabled this function, SIP-Phone will search dialed number in phone book to see if there is any matched table before send to Proxy server, and if there is a matched data in phone book, SIP-Phone will make call to related IP

- address.
- lmedia     Some platform will send and reply the SDP in “SIP 200OK” and “ACK”. But the FXO gateway can only send and reply SDP in SIP Invite and SIP 200OK. Enable this function will push the FXO gateway to send and reply SDP in “SIP 200OK” and “ACK.
  - cidchange   The FXO will set the PSTN caller ID in the SIP “display name” field if the FXO can detect the PSTN caller ID successfully. But some platform can only will also confirm the calling number via the “SIP FROM header”. Enable this function will set the PSTN caller number instead of the FXO local number. Please disable this function if you are not sure what you are doing.
  - expire     It just like the TTL function in H323, the gateway will make sure the registration is success or not for a period times.
  - port       define the local sip port for this gateway.
  - rtsp       to allocate RTP port range—NOT RECOMMENDED. This may be used when RTP port range conflicts with Firewall policy. (each port of Gateway use 2 RTP ports)
  - busy       User can define a special response message to server if all slots are busy but get an IP incoming call.

#### 4.2.12 [security]

This is the authentication for the SIP account.

-----  
*usr/config\$ security*

*Security information and configuration*

*Usage:*

*security [-name username] [-password password]*

*security -print*

*-print           Display system account information and configuration.*

*-line            Specify which line number you want to set the account.*

*-name            Specify user name.*

*-password       Specify password.*

*Example:*

*security -line 1 -name kkk -password 12345*

*usr/config\$*

---

Parameter Usages:

- print        print out all current settings of security.
- line        the line number, which you want to define the security info
- name        the name is as same as the SIP number.
- password   the password for the authentication if it is the necessary for the proxy.

#### 4.2.13 [line]

This command is for configure each line parameters of Gateway.

-----

*usr/config\$ line*

*Gateway line information and configuration*

*Usage:*

*line -config number [hunt number][hotline number]*

*line -print        Gateway line information.*

*hunt        Hunting group.*

*hotline     Hot line configuration.*

*Example:*

*line -config 1 hunt 1 hotline 1003*

*usr/config\$*

---

Parameter Usages:

- print        print out all current settings of line
- config      determine which line to configure
- hunt        set hunting group flag of each line. User can assign different hunt group number represent different hunt group. For example, if user assigns FXS TEL1 as hunt group 1, and FXS TEL2 as hunt group 2, they will be determined as 2 different groups. On the other hand, if user assigns FXS TEL1 as hunt group 1, and FXS TEL2 as hunt group 1 too, when having incoming call to FXS TEL1, which is busy, this call will be route to FXS Line2.

**Note:** FXO Lines and FXS TELs are treated as 2 different groups, so even they are in the same hunt group, call will only be routed to the same FXS or FXO Lines.

-hotline set hotline table. The Hotline Mode is applied in limited two channels. Users just make calls into the FXO port and gateway will automatically dial out a phone number. In the other hand, user will hear ring back tone or dial tone immediately depended on configurations of destination device.

**Note:** This function can both work in Proxy or P2P mode.

#### **Proxy Mode Usage:**

Set gateway under proxy mode.

Create a Hotline table with “**line**” command.

```
-----
usr/config$ line -config 1 hotline 1001
-----
```

In this example means: if users make calls into the FXO Line1, gateway will automatically dial out “1001”.

#### **P2P Mode Usage:**

Set gateway under P2P mode.

Create phone book table with “**pbook**” command.

Create a Hotline table with “**line**” command.

```
-----
usr/config$ pbook -add name sipfxs ip 10.1.1.1 e164 1001
usr/config$ line -config 1 hotline 1001
-----
```

In this example means: if users make call into the FXO Line1, gateway will automatically dial out IP address of “1001”.

### **4.2.14 [route]**

This command is to set routing table for Gateway.

---

```
usr/config$ route
```

*Routing table information and configuration*

*Usage:*

---

```

route -add [prefix number][dst number][e164 number]
        [min number][max number][hunt number]
route -delete index
route -modify index [prefix number][dst number][e164 number]
        [min number][max number][hunt number]
route -ip [dst number][e164 number]
route -fxo [dst number][e164 number]
route -print    Routing table information.
                prefix    The prefix of dialed number.
                dst        Destination port(FXO:1/IP:2).
                e164       Destination e164 number(when destination is FXO).
                min        Min digits.(0 ~ 255)
                max        Max digits.(0 ~ 255)
                hunt                Hunt        method        for        busy
forward(NONE:0/GROUP:1/ALL:2).

```

Example:

```

route -add prefix 100 dst 1 e164 1001 min 1 max 3 hunt 1
route -ip dst 1 e164 1001
route -fxo dst 2 e164 x
route -modify 1 prefix 100 dst 2 e164 1001 min 1 max 3 hunt 1
route -delete 1

```

*usr/config\$*

---

Parameter Usages:

```

-print    print out all routing table information
-add      add a routing rule in routing table. User can add less than 50
          rules. (route -add prefix "prefix number" dst "destination
port type" e164 "SIP number of port" min "minimum
digits needed" max "maximum digits can't be
exceeded")
-delete   delete a routing rule in routing table (route -delete "index of
routing rule")
-modify   modify a routing rule in routing table. (route -modify "index
of routing rule" prefix "prefix number" dst "destination
port type" e164 "SIP number of port" min "minimum
digits needed" max "maximum digits can't be
exceeded")

```

|        |   |
|--------|---|
| -ip    | create routing table for incoming call from IP side. ( <b><i>route -ip dst "destination port type" e164 "SIP number of port"</i></b> )  |
| -fxo   | create routing table for incoming call from FXO Lines. ( <b><i>route -fxo dst "destination port type" e164 "SIP number of port"</i></b> )   |
| prefix | prefix of dialed number   |
| dst    | destination port, 0 means FXS TELs, 1 means FXO Lines, 2 means IP side, x means no determinate number.  |
| e164   | destination SIP number. This only need to be set when routed port is FXS TELs or FXO Lines to determine which port will this call be routed to.   |
| min    | minimum digits needed.  |
| max    | maximum digits needed.  |
| hunt   | set hunt method for busy forward. 0 means no hunting, 1 means hunting method follows the rule of <b><i>[line]</i></b> , 2 means hunting method is to hunt between all ports in the same type, for example, destination port is FXS TEL will hunt in all FXS TELs, destination port is FXO Lines will hunt in all FXO Lines. |

**Usage Example:****1. route -add prefix 100 dst 1 e164 1001 min 1 max 3 hunt 1**

*This command means if gateway has incoming call's prefix number is 100, and total digits is between 1 to 3, this call will be routed to FXO port 1001, and if port 1001 is busy, call will be routed to another FXO port.*

**2. route -ip dst 1 e164 1002**

*This command means incoming call from IP side will be routed to FXO Line of number 1002.*

**3. route -fxo dst 2**

*This command means incoming call from FXO Lines will be routed to IP side.*

**Note:**

**(1) When destination is IP side, SIP number doesn't need to determine. (Ex. route -fxo dst 2)**

**(2) If user doesn't want to determine a specific port to route, SIP number must set as "x". (Ex. route -ip dst 1 e164 x)**

## 4.2.15 [prefix]

This command is for make rules for drop or insert prefix digits.

-----  
*usr/config\$ prefix*

*Prefix drop/insert information and configuration*

*Usage:*

*prefix -add [prefix number][drop number][insert digits]*

*prefix -delete index*

*prefix -modify index [prefix number][drop number][insert number]*

*prefix -print       Prefix drop/insert information.*

*prefix        The prefix of dialed number.*

*drop         Drop prefix(Enable:1/Disable:0).*

*insert       Insert digits.*

*Example:*

*prefix -add prefix 100 drop 1 insert 2000*

*prefix -add prefix 100 drop 1*

*prefix -add prefix 100 drop 0 insert 200*

*prefix -delete 1*

*prefix -modify 1 prefix 100 drop 0 insert 300*

*usr/config\$*

---

Parameter Usages:

-add     add a rule to drop or insert prefix digits of incoming call. (***prefix -add prefix "prefix number" drop 0/1 insert "insert number"***)

-delete   delete a rule to drop or insert prefix digits of incoming call. (***prefix -delete prefix "prefix number"***)

-modify   modify a rule to drop or insert prefix digits of incoming call. (***prefix -modify prefix "prefix number" drop 0/1 insert "insert number"***)

prefix   set which prefix number to implement prefix rule.

drop     enable or disable drop function.If this function is enabled, Gateway will drop prefix number on incoming call.

insert   set which digit to insert on incoming call.

### 4.2.16 [pause]

Pause function allows users define a prefix for FXO, it usually apply to one-stage-dialing.

For example, the FXO port is connect to a PBX, when an incoming call from IP side, users will hear a dial tone from PBX. If they want to dial to a PSTN, they must press a special code and wait 1~2 seconds for the PSTN dial tone. But in one-stage-dialing application, the FXO will not wait for the dial tone and it will dial immediately. Now user can define a special prefix, so if FXO detect the prefix, it will wait a moment then keep dialing.

-----u

*usr/config\$ pause*

*Prefix drop/insert information and configuration*

*Usage:*

*pause -add [prefix number][delay number]*

*pause -delete index*

*pause -modify index [prefix number][drop number][insert number]*

*pause -print       Prefix drop/insert information.*

*prefix       The prefix of dialed number.*

*delay        delay time(second).*

*Example:*

*pause -add prefix 100 delay 1*

*pause -delete 1*

*pause -modify 1 prefix 101 delay 0*

*usr/config\$*

---

Parameter Usages:

-add       add a new record to pause function. When adding a record, users have to specify **prefix** and **delay** seconds to complete the command.

-delete    delete a record to pause function.

-print     print out current contents of Pause function.

### 4.2.17 [pbook]

Phone Book function allows users to define their own numbers, which mapping to real IP address. It is effective only in peer-to-peer mode. When adding a record to Phone Book, users also **have to reboot** the

machine, and the record will be effective immediately.

-----u  
usr/config\$ pbook

### Phone book information and configuration

#### Usage:

```
pbook [-add [name string][e164 number][ip address]
      [drop digit][insert number]]
      [-modify number [name string][e164 number][ip address]
      [drop digit][insert number]]
      [-delete number]
pbook -print
```

```
-print      Display phone book information and configuration.
-add        Add new phone book record)
-delete     Delete phone book record
-modify     Modify phone book record.
            name      : 1 ~ 10 characters.
            e164      : 1 ~ 10 digits.
            ip        : IP adress.
            port      : 1024 ~ 65535.
            drop      : 0:Disable/1:Enable.
            insert    : 1 ~ 10 digits.
```

#### Example:

```
pbook -add name test e164 1234 ip 192.168.1.10 drop 1 insert 5678
pbook -delete 1
pbook -modify 1 name test e164 5678 ip 192.168.1.10 drop 0
```

usr/config\$

---

#### Parameter Usages:

```
-print      print out current contents of Phone Book. (pbook -print)
            Users can also add index number, from 1 to 100, to the
            parameter to show specific phone number. (Ex. pbook -print
1)
```

*Note: <index number> means the sequence number in phone*

*book. If users do request a specific index number in phone book, Gateway will give each record a automatic sequence number as index.*

- add      add a new record to phone book. When adding a record, users have to specify **name**, **ip**, and **e164** number to complete the command.
- name      name to represent callee.
- e164      e.164 number for mapping with IP address of callee
- ip         ip address of callee
- port      call signal port number of callee
- drop      drop e.164 number when dial out. 0 means to keep e.164 number, 1 means to drop e.164 number when dialing out.
- insert    insert digits.(1~10 digits)
- modify    modify an existing record. When using this command, users have to specify the record's index number, and then make the change.
- delete    delete a specific record. "pbook -delete 3" means delete **index 3** record.

#### ***PhoneBook Rules:***

The e164 number defined in phone book will fully carry to destination. It is not just a representative number for destination's IP Address. In other words, user dial this e164 number to reach destination, destination will receive the number and find out if it is matched to its e164, including Line number in some particular device.

#### **4.2.18 [voice]**

The voice command is associated with the audio setting information.

There are four voice codecs supported by Gateway.

-----  
*usr/config\$ voice*

*Voice codec setting information and configuration*

*Usage:*

*voice [-send [G723 ms] [G729 ms] [G729A ms] [G729B ms] [G729AB ms] [G711U ms] [G711A ms] ]*

*[-volume line [voice level] [input level] [dtmf level]]  
[-nscng [G711U used1] [G711A used2] [G723 used3]]  
[-echo used] [-mindelay t1] [-maxdelay t2] [-optfactor f]*

*voice -print*

*voice -priority [G723] [G729] [G729A] [G729B] [G729AB] [G711U]  
[G711A]*

- print*      *Display voice codec information and configuration.*
- send*      *Specify sending packet size.*  
  - G.723 (30/60/90 ms)*
  - G.729 (20/40/60 ms)*
  - G.729A (20/40/60 ms)*
  - G.729B (20/40/60 ms)*
  - G.729AB (20/40/60 ms)*
  - G.711U (20/40/60 ms)*
  - G.711A (20/40/60 ms)*
- priority*   *Priority preference of installed codecs.*  
  - G.723*
  - G.729*
  - G.729A*
  - G.729B*
  - G.729AB*
  - G.711U*
  - G.711A*
- volume*    *Specify the following levels:*  
  - voice volume (0~63, default: 30),*
  - input gain (0~63, default: 30),*
  - dtmf volume (0~31, default: 23),*
- nscng*      *No sound compression and CNG. (G.723.1 only, On=1, Off=0).*
- echo*      *Setting of echo canceller. (On=1, Off=0, per port basis).*
- mindelay*   *Setting of jitter buffer min delay. (0~150, default: 90).*
- maxdelay*   *Setting of jitter buffer max delay. (0~150, default: 150).*

*Example:*

*voice -send g723 60 g729 60 g729a 60 g729b 60 g729ab 60 g711u  
60 g711a 60  
voice -volume 1 voice 20 input 32 dtmf 27*

*voice -echo 1 1 1 1*

*usr/config\$*

---

#### Parameters Usage:

- print        print current voice information and configurations.
- send        define packet size for each codec. 20/40/60ms means to send a voice packet per 20/40/60 milliseconds. The smaller the packet size, the shorter the delay time. If network is in good condition, smaller sending packet size is recommended. In this parameter, 20/40/60ms is applicable to G.711u/a law, and G.729/G.729A/G.729B/G.729AB codec, while 30/60ms is applicable to G.723.1 codec.
- priority    codec priority while negotiating with other SIP device. This parameter determines the listed sequence in SDP message. The codec listed in left side has the highest priority when both parties determining final codec. User can also select the particular codec without others.

---

*usr/config\$ voice -priority g723 (only select this codec)*

*usr/config\$ voice -priority g723 g729 g711u g711a (select four codecs, and g723 is the first choice)*

---

- volume     There are three adjustable values. **voice volume** stands for volume, which can be heard from Gateway side; **input gain** stands for volume, which the opposite party hears; **dtmf volume** stands for DTMF volume/level, which sends to its own Line.

**Note:** level of volume is too high or too low may be result in bad performance while connecting to each other. Please make the value below 35.

- nscng        silence suppression and comfort noise generation setting (1 = ON; 0 = OFF). It is applicable to G.723 codec only. An example is demonstrated below:

---

```
usr/config$ voice -nscng g723 1
```

---

-echo activate each canceler (1 = ON; 0 = OFF).  
 -mindelay the minimum jitter buffer size. (Default value= 90 ms)  
 -maxdelay the minimum jitter buffer size. (Default value= 150 ms)

---

```
usr/config$ voice -mindelay 90 -maxdelay 150
```

---

*Note: be sure to know well the application before you change **voice** parameters because this might cause incompatibility.*

#### 4.2.19 [tone]

This command is basically for FXO ports.

---

```
usr/config$ tone
```

*Disconnect tone and remote ring back tone configuration*

*Usage:*

```
tone [num][freqLo ][freqHi ][freqLoLev][freqHiLev]
      [Tone1ON][Tone1OFF][Tone2ON ][Tone2OFF ]
tone -print Display tone configuration.
      [num] Tone index(1~4:Disconnect tone / 5~8:Remote ring back
tone).
```

*Example:*

```
tone -print
tone 1 480 620 8 8 50 50 1023 1023
```

---

```
usr/config$
```

---

Parameter Usages:

-print show all tone configuration  
 [num] tone index. 1~4 is disconnect tone, 5~8 is remote ring back tone.

For FXO ports Gateway must detect disconnect tone to

determine when to disconnect the call, so user must set disconnect tone of PBX or PSTN network connected to FXO ports.

When making a call from FXO ports, there are 2 ways to detect call has already picked up the call, one is to detect reverse signal, the other is to detect the termination of ring back tone, so user must set ring back tone of PBX or PSTN network.

(If user doesn't know about the frequency of disconnect tone or ring back tone, please refer to **[record]** command to detect frequency.)

For each tone may has 1 set or 2 sets (high and low) of frequencies. If user wants to set 0 in on/off time, please set "1023" represent "0". (ex. **tone 1 620 480 8 8 50 50 1023 1023**)

**(tone "index of tone" "frequency of high" "frequency of low" "level of high" "level of low" "on time of high" "off time of high" "on time of low" "off time of low" )**

#### 4.2.20 [fxopwd]

This command is for FXO ports.

---

*usr/config\$ fxopwd*

*FXO password information and configuration*

*Usage:*

*fxopwd -add [passwd number]*

*fxopwd -delete index*

*fxopwd -modify index [passwd number]*

*fxopwd -print FXO password information.*

*passwd The password.*

*Example:*

*fxopwd -add passwd 1234*

*fxopwd -delete 1*

*fxopwd -modify 1 passwd 1234*

*usr/config\$*

## Parameter Usages:

-print show all FXO password configuration  
 -add add 1 set of FXO password  
 -delete delete 1 specific set of FXO password  
 -modify modify 1 specific set of FXO password  
 passwd password

**4.2.21 [record]**

User can record greeting and askpin file and analyze tone frequency by calling in FXO line of Gateway.

---

*usr/config\$ record*

*Recoed greeting voice and ask pin code voice, tone analyzes.*

*Usage:*

*record -greeting filename  
 -askpin filename  
 -tone*

*Example:*

*record -greeting greeting.100  
 record -askpin askpin.100  
 record -tone*

*usr/config\$*

---

## Parameter Usages:

-greeting record greeting file. User must assign a file name for greeting, once record is finished, file recorded will be display in rom -print.

---

*usr/config\$ record -greeting greeting.test*

*Please off hook the LINE 1 and press (N) for the next step...*

*n*

---

*Press (R) to start record...*

*r*

*Press (S) to stop record...*

.....  
 .....  
 .....S.....

*Press (P) to play the voice or (W) to write to flash or (Q) to quit...*

*p*

*w*

*Please wait a moment...*

*Write flash ok...*

*Boot Rom : boot.104*  
*Application Rom : 4fxo.118a*  
*DSP App : 48302ce3.140*  
*DSP Kernel : 48302ck.140*  
*DSP Test Code : 483cbt.bin*  
*Greetings : greeting.test*  
*Ask Pin : askpin.102*

*q*

*usr/config\$*

---

-askpin record askpin file. User must assign a file name for askpin file,  
 once record is finished, file recorded will be display in  
 rom -print.

.....  
*usr/config\$ record -askpin askpin.test*

*Please off hook the LINE 1 and press (N) for the next step...*

*n*

*Press (R) to start record...*

r

Press (S) to stop record...

.....  
.....  
.....S.....  
.....  
.....

Press (P) to play the voice or (W) to write to flash or (Q) to quit...

p  
w

Please wait a moment...

Write flash ok...

Boot Rom : boot.104  
Application Rom : 4fxo.118a  
DSP App : 48302ce3.140  
DSP Kernel : 48302ck.140  
DSP Test Code : 483cbit.bin  
Greetings : test.100  
Ask Pin : askpin.test

q

usr/config\$

---

-tone analyze tone frequency. Gateway can analyze tone frequency  
as users provide tone in FXO Line1.

-----  
usr/config\$ record -tone

usr/config\$ record -tone

Press (R) to start record...

r

.....

```
.....  
.....  
.....  
.....  
Analizing!! Please wait a moment...  
Frequency 1 : 620  
Frequency 2 : 474  
0.25sec on 0.25sec off  
usr/config$
```

---

## The Procedures of recording the disconnect tone

Before you start :

Two PSTN lines which connected with the Line 1 and Line 2 port.  
Configure Peer-to-Peer mode.

Please record the disconnect tone just follow the stage as below :

1. Please enter the command before you record the disconnect tone :  
*record -tone*
2. Make a call from PSTN side into Line 2 port.
3. You will get a greeting when the calls enter the gateway.
4. Please dial the number of the Line 1 port.
5. You will get another dial tone from the PSTN line which was connected with the Line 1 port.
6. Answer the call and make sure the call is connected.
7. Hang up the phone which is from the Line 2 port and you will get the disconnect tone from the Line 1 port.
8. When you get the disconnect tone from the Line 2 port, press <R> and <ENTER> buttons to start recording the disconnect tone.
9. Please hang up the phone if you get the message as below : *Analizing!! Please wait a moment...*
10. There are three values you will get after analyzing. Please leave the value which is over 1000 Hz, this is not the frequency of disconnect tone.
11. Please put the frequency in the tone table just follow the command :  
tone 4 420 680 8 8 25 25 50 50

【 Example-1 】

(Make a call from PSTN to FXO port)

usr/config\$ record -tone

Press (R) to start record...

(Please make sure that you are already finish the steps 2 ~ 7)

r (Press "Enter" button after you key in "R")

.....  
.....  
.....  
.....

Analizing!! Please wait a moment...

(You coule hang up the call from PSTN if you get this message)

Frequency 1 : 481

Frequency 3 : 621

0.25sec on 0.25sec off

tone 4 481 621 8 8 25 25 1023 1023

(Put this value in to the tone table)

tone -print

Disconnect tone 1 paramter

Frequency high : 620

frequency low : 480

frequency high level : 8

frequency low level : 8

Tone1 on : 25

Tone1 off : 25

Tone2 on : 1023

Tone2 off : 1023

Disconnect tone 2 paramter

Frequency high : 450

frequency low : 0

frequency high level : 8  
frequency low level : 0  
Tone1 on : 35  
Tone1 off : 35  
Tone2 on : 1023  
Tone2 off : 1023

## Disconnect tone 3 paramter

Frequency high : 620  
frequency low : 480  
frequency high level : 8  
frequency low level : 8  
Tone1 on : 50  
Tone1 off : 50  
Tone2 on : 1023  
Tone2 off : 1023

## Disconnect tone 4 paramter

Frequency high : 621  
frequency low : 481  
frequency high level : 8  
frequency low level : 8  
Tone1 on : 25  
Tone1 off : 25  
Tone2 on : 50  
Tone2 off : 50

(Confirm the values is correct or not)

(Key in the commit and reboot command if you finish the procedures as above)

## 【Example-2】

(Make a call into FXO port)

```
usr/config$ record -tone
```

Press (R) to start record...

(Please make sure that you are already finish the steps 2 ~ 7)

r (Press "Enter" button after you key in "R")

.....  
.....  
.....  
.....

Analizing!! Please wait a moment...

(You could hang up the call from PSTN if you get this message)

Frequency 1 : 473

Frequency 2 (2623) is more than 1000, please ignore it.

0. 25sec on 0.25sec off

tone 4 473 473 8 8 25 25 1023 1023

(Please configure the high and low frequency as the same value if you just get a singal frequency)

tone -print

Disconnect tone 1 paramter

Frequency high : 620  
frequency low : 480  
frequency high level : 8  
frequency low level : 8  
Tone1 on : 25  
Tone1 off : 25  
Tone2 on : 1023  
Tone2 off : 1023

Disconnect tone 2 paramter

Frequency high : 450  
frequency low : 0  
frequency high level : 8  
frequency low level : 0  
Tone1 on : 35  
Tone1 off : 35  
Tone2 on : 1023  
Tone2 off : 1023

## Disconnect tone 3 paramter

Frequency high : 620  
 frequency low : 480  
 frequency high level : 8  
 frequency low level : 8  
 Tone1 on : 50  
 Tone1 off : 50  
 Tone2 on : 1023  
 Tone2 off : 1023

## Disconnect tone 4 paramter

Frequency high : 473  
 frequency low : 473  
 frequency high level : 8  
 frequency low level : 8  
 Tone1 on : 25  
 Tone1 off : 25  
 Tone2 on : 50  
 Tone2 off : 50

(Confirm the values is correct or not)

(Key in the commit and reboot command if you finish the procedures as above)

#### 4.2.22 [support]

Special Voice function support manipulation

-----  
*Special Voice function support manipulation*

*Usage:*

*support [-t38 enable][-t38ecm enable][-faxrdd digits]*

*support -print*

*-t38 T.38(FAX) enabled/disabled.*

*-t38ecm T.38(FAX) ECM enabled/disabled.*

*-faxrdd FAX redundancy depth(0 ~ 2).*

*Example:*

*support -t38 1*

*support -t38ecm 1*

*support -faxrdd 1*

*usr/config\$*

## Parameter Usages:

- t38            Enable or disable T.38 fax ability. The function will automatically switch codec (G.723 or G.729a) to T.38 when FAX signal is detected.
- t38ecm        Enable or disable t38ecm function. The function is support the error correction in the high-speed fax mode.
- faxrdd        Set Fax redundancy depth. User can increase FAX redundancy depth when network traffic is heavy. For example, if user set fax redundancy as 2, Gateway will resend fax packets every 2 packets.

**4.2.23 [tos]**

IP Packet ToS(type of Service)/Differentiated Service configuration.

-----

*usr/configtos*

*IP Packet ToS(type of Service)/Differentiated Service configuration*

*Usage:*

*tos [-rtptype dscp]*

*tos [-sigtype dscp]*

*tos -print*

*[-rtpreliab mode]*

*tos -print*

*Example:*

*tos -rtptype 7 -sigtype 0*

## Parameter Usages:

- rtptype        the packages of voice
- sigtype        the package of call signal

**Note:**

**The value of rtptype and sigtype is from 0 to 63.**

**It's working if it supported by your network.**

#### 4.2.24 [pt]

RTP payload type configuration and information

---

*usr/config\$ pt*

*RTP payload type configuration and information*

*Usage:*

|                     |   |
|---------------------|---|
| <i>pt -print</i>    | <i>Display the RTP payload type information</i> |
| <i>-rfc2833</i>     | <i>Configure the DTMF RFC2833 payload type</i>  |
| <i>-dtmf</i>        | <i>Configure the DTMF payload type</i>          |
| <i>-fax</i>         | <i>Configure the FAX payload type</i>           |
| <i>-faxbypass</i>   | <i>Configure the FAX ByPass payload type</i>    |
| <i>-modembypass</i> | <i>Configure the MODEM ByPass payload type</i>  |
| <i>-redundancy</i>  | <i>Configure the Redundancy payload type</i>    |
| <i>-modemrelay</i>  | <i>Configure the MODEM Relay payload type</i>   |

*Example:*

*pt -rfc2833 96 -fax 101*

*usr/config\$*

---

#### 4.2.25 [rom]

ROM file information and firmware upgrade function.

---

*usr/config\$ rom*

*ROM files updating commands*

*Usage:*

*rom [-print][-app][-boot][-dsptest][-dspcore][-dspapp][-greet][-askpin]*  
*-s TFTP/FTP server ip -f filename*

*rom -print*

|                 |   |
|-----------------|---|
| <i>-print</i>   | <i>show versions of rom files. (optional)</i> |
| <i>-app</i>     | <i>update main application code(optional)</i> |
| <i>-boot</i>    | <i>update main boot code(optional)</i>        |
| <i>-dsptest</i> | <i>update DSP testing code(optional)</i>      |
| <i>-dspcore</i> | <i>update DSP kernel code(optional)</i>       |
| <i>-dspapp</i>  | <i>update DSP application code(optional)</i>  |

---

*-greeting* update greeting voice file(optional)  
*-askpin* update ask pin code voice file(optional)  
*-s* IP address of TFTP/FTP server (mandatory)  
*-f* file name(mandatory)  
*-method* download via TFTP/FTP (TFTP: mode=0, FTP: mode=1)  
*-ftp* specify username and password for FTP  
*-server* specify EMS Server IP address  
*-id* specify EMS Server ID  
*-pwd* specify EMS Server password  
*-emstime* specify EMS cycle time

**Note:**

This command can run select one option in 'app', 'boot', 'dsptest', 'dspcore', and 'dspapp'.

**Example:**

```

rom -method 1
rom -ftp vwusr vwusr
rom -app -s 192.168.4.101 -f app.bin
  
```

*usr/config\$*

---

**Parameter Usages:**

*-print* show versions of all rom files  
*-app, boot, dsptest, dspcore, dspapp, greeting, askpin*

To update main Application program code, Boot code, DSP testing code, DSP kernel code, DSP application code, greeting file, askpin file.

**Note: To set mac address please key in command setmac:(when key in MAC address ,press enter each time after key in two characters)**

Please get the MAC address from the bottom of your FXO VOIP units.

---

*usr/config\$ setmac*

*- enter mac address (xxxxxxxxxxxx):*

*0001a8002baa*

*- the mac address is 00 01 a8 00 2b aa*

*- if mac address is correct,please press 'y' to*

*setup configuration,else press 'n' to continue*

*y*

- 
- greeting    The greeting file can be updated by users. The attributes of sound file should complied to: μ-law, 8000 Hz , 8 bit, Mono, 7 kb/s
  - askpin      update ASKPIN sound file. This is the greeting sound that when asking for pincode.
  - s            to specify TFTP server's IP address when upgrading ROM files.
  - f            to specify the target file name, which will replace the old one.
  - method     to decide using TFTP or FTP as file transfer server. "0" stands for TFTP, while "1" stands for FTP.
  - ftp         if users choose FTP in above item, it is necessary to specify pre-defined username and password when upgrading files.

#### 4.2.26 [passwd]

For security concern, users have to input the password before entering configuration mode.

---

*usr/config\$ passwd*

*Password setting information and configuration*

*Usage:*

*passwd -set Loginname Password*

*passwd -clean*

*Note:*

- 1. Loginname can be only 'root' or 'administrator'*
- 2. passwd -clean will clear all passwd stored in flash, please use it with care.*

*Example:*

*passwd -set root Your\_Passwd\_Setting*

*usr/config\$*

---

Parameter Usages:

-set

**(passwd –set “login name” “password”)**

**Note** : “login name” can be “**root**” or “**administrator**” only. “root” and “administrator” have the same authorization, except some commands that can be executed by “root” only – “**passwd –clean**”, “**rom –boot**”, “**rom –bot2m**” and “**flash –clean**”.

#### 4.2.27 [auth]

For security concern, the “root” user can customize some configurable items for “administrator” user.

---

*usr/config\$ auth*

*Root control what command administrator can use.*

*Usage:*

*auth -print Display auth switch configuration.*

*Use item name to do config name (0=Disable, 1=Enabled).*

*Example: auth -ifaddr 1*

*usr/config\$*

---

Parameter Usages:

-print Display the configurable items for “administrator” user.

-“item name” Assign the configurable item for “administrator” user.

**Note** : For example, you can set below authorization for root user.

```
usr/config$ auth -ifaddr 1
usr/config$ auth -sip 1
usr/config$ auth -voice 1
```

Now the Administrator can use these command which Root user assign to them.