

Welltech Product Release Note

Date: Mar-24-2008

Model Name:	WG2608	Object:	<input type="checkbox"/> H.W. <input checked="" type="checkbox"/> S.W.
Subject:	Release Application Rom : 8fxssip.101 Release Hold tone and IVR file:		
Release contents			
Bug Fixed			
Feature and Function Added			
<ol style="list-style-type: none">Web UI reorganized. Added Network configuration, Generation Configuration, Management. Detail information please refer to the user manual.Flash Clean changed to Rest to Default.Management added provision function: Provision management via Welltech Pro-9510 server.Added Representative number L1~L8 can be grouped by Representative numberSupport MWI (Message Waiting indicator) function.Added Speed Dial function.Added ETSI caller ID type.Caller ID type can be defined by line.Added Save-Reload Setting Import/Export user config data.Added Dial plan function.Added Digit Manipulation function.			
Configuration Item Changed			
Application Block Diagram			
Hyperlink			
<ol style="list-style-type: none">WELLTECH WEB Site: http://www.welltech.comFirmware Download: http://www.welltech.com/support/2608.htm -> 8fxssip.101.zipUser Manual: http://www.welltech.com/support/2608.htm -> wg2608 User Manual 101.pdf			

Note

Firmware updated procedure:

The Boot code and Pspot code of WG2608 for the new version have been changed, and this version added IVR files. You must use Telnet (command line interface) to upgrade the new firmware. Don't try to use WEB (HTTP) interface, it will make your WG2608 crashed.

1. You will need a TFTP client/server software installed on the PC to perform the firmware update, you can download this software from the following URL:
http://www.welltech.com/support/voip/TFTP/TFTP_Server.zip
If you already have a TFTP or FTP server in place, please disregard this step.
2. Change the IP address of your PC to 192.168.123.1
3. Connect your PC with the LAN port of WG2608.
4. Execute your TFTP server and select the file path, then please follow the instructions explained below to update the WG2608 firmware.

Step of firmware updated

Step	command	Remark
1	On Windows desktop, click Start→Run→cmd	Now under the command prompt menu
2	telnet 192.168.123.123	Assuming the PC connected to the LAN port of the WG2608 has an IP address of 192.168.123.1
3	root	login username
4		Password is blank, press enter key
5	rom -app -s 192.168.123.1 -f 8fxssip.101	
6	reboot	
7	telnet 192.168.123.123	
8	root	login username
9		Password is blank, press enter key
10	flash -cleanall	System will auto reboot,
11	telnet 192.168.123.123	Reconnect
12	root	login username
13		Password is blank, press enter key
14	rom -ht -s 192.168.123.1 -f hold.100	Add Hold Tone
15	rom -s 192.168.123.1 -ipivr 0 0.pcm 1 1.pcm 2 2.pcm 3 3.pcm 4 4.pcm 5 5.pcm 6 6.pcm 7 7.pcm 8 8.pcm 9 9.pcm . dot.pcm	Add IVR files
16	reboot	

Note: To check whether the firmware upgrade process is completed or not, press the Enter key and check if there is any response from the command line. If there is, then the firmware update is complete, if there is no response, the firmware upgrade is still in process.